# Concrete Paving Inspection Workbook

Certified Inspector Training Program



#### **TABLE OF CONTENTS**

- Field Inspection
- Plant Inspection



# **Concrete Paving Operations**

- Resources
- Definition
- Overview
- Inspector's Responsibilities
- Plans
- Pre-Paving Checks
- Paving Operations

# **Concrete Paving Operations**

- Repair of Defective Pavement Slabs
- Pavement Smoothness
- Pavement Thickness
- Spec Overview

3

#### **KDOT** References/Resources

- 2015 Standard Specifications
- Project Plans
- Special Provisions
  - Project Specific Special Provisions
- Construction Manual
- Documentation Manual

Δ

#### External References/Resources


- CP Tech Center
  - http://www.cptechcenter.org/
  - Concrete Pavement Construction Basics
  - Concrete Paving Training & Field Reference for Preventing Common Problems
  - Integrated Materials and Construction Practices for Concrete pavement
    - Glossary
    - Trouble shooting guide

5

#### External References/Resources

- National Highway Institute (NHI)
  - National Highway Institute | Home (dot.gov)
     Free Web based courses
- American Concrete Pavement Association
  - http://www.acpa.org/
  - Youtube
  - Apps
  - Reference Materials (paid)



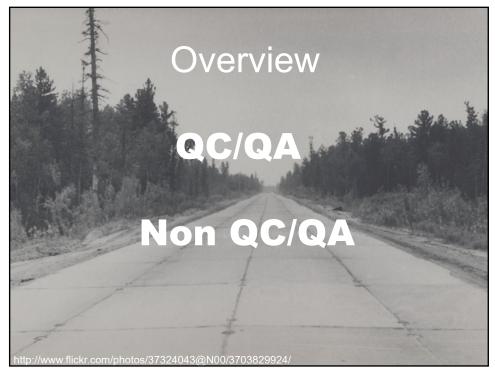

# **Definitions**

QC = Quality Control testing provided by contractor

QA = Quality Assurance testing provided by KDOT or KDOT's hired consultant Non-QC/QA = KDOT provides both quality control and quality assurance

testing

9

# 

SAMPLING AND TESTING FREQUENCY CHART CONTRACTOR QUALITY CONTROL TESTING					
CONSTRUCTION OR MATERIAL TYPE 2015 Std. Spec. (SS 2015)	TESTS REQUIRED (RECORDED TO)		DE QUALITY CONTROL BY COL	VERIFICATION BY KDOT	
DIVISION 500 (continued)					
PORTIAND CEMENT CONCRETE PAYEMENT Sec. 501 & 503 (continued) Concrete (continued)	Air Content (0.25%)	KT-18 or a KT-19	I per 500 yd' or every 2 hours (mainline), every 4 hours (other slipformed pyml), whichever is more frequent. Determine the air loss due to paving operations once in the AM and once in the PM. Determine the difference between the air content from concrete sampled before the paver, and concrete sampled behind the paver.	1 per day.	
	Density of Fresh Concrete (0.1 lb/ft³)	KT-38	Initially, 1 complete transverse profile, then 1 density per ½ day.	1 density per week.	
	Beams (1 psi)	KT-22 & KT-23	1 set of 3 as required for opening to traffic.	1 set of 3 per week as required for opening to traffic.	
	Cores (1 lbf, 0.01 in, 1 psi)	KT-49	As required in SS 2015 section 501.5g.	Thickness measurement an compression test – 1 per lo	











# Responsibility

- \$\$\$
- Smooth, durable, according to plan
- Constructed efficiently, quickly, safely
- Quality

17

# Fulfill these Responsibilities

- Familiar with Contract Documents
- Details
- Look ahead

# Fulfill these Responsibilities

- Know who to talk to
- Ask questions & develop rapport
- Know your duties
- Authority

19

#### **Plans**

- Review the plans thoroughly.
  - Typical sections
  - Plan and profile sheets
  - Detail sheets
    - <u>Dowel jointed pavement</u>
    - Joint layout
    - <u>Transitions</u>
  - Typical sheets relevant to paving

### **Plans**

- Pay particular attention to:
  - Superelevations ( <u>% super elevations</u>, <u>transitions in cross-slopes</u>)
  - Ramp or intersection tie-ins (cross-slope, superelevations)
  - Transition points (superelevations)
  - Joint placement
  - Location and layout of reinforcing steel

21

# **Pre-Paving**

- 501.4
- 502.3

# **Pre-Paving Checks**

- Subgrade/Base preparation
  - Lines and grades of typical sections.
  - Remove any soft, non-compacting material
  - Remove any loose material.
  - Cut high areas/fill low areas.
  - Protect subgrade

23









# Pre-Paving Checks

- Contractor's Equipment
  - Straight edges
  - Floats
  - Edgers
  - Backup vibrators
  - Temporary forming

- Pavement bridge
- White poly sheeting
- Burlap
- Insulated blankets

# Pre-Paving Checks

- Inspector's Equipment
  - 4-foot level
  - tape measurestation markers
  - folding rulefield books
  - string line
- Paint

- test equipment

29


# **Various Contractor Tools**









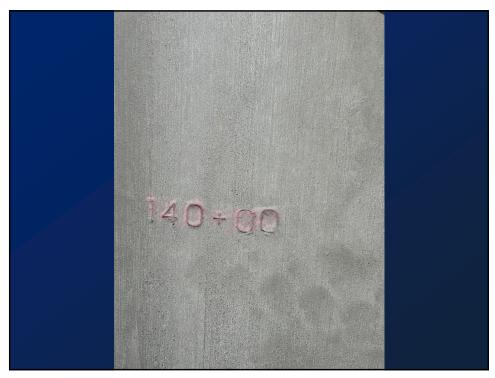

# **Pre-Paving Checks**


- Equipment (154)
  - Slip Form Paving
  - Fixed Form Paving

# **Pre-paving Checks**


#### Slip Form Equipment Checks


- Vibrators (properly spaced, clearance for reinforcement, good working order and proper frequency).
- Screed (proper crown (if required), good working order and alignment).
- Side Forms (proper depth, keyway location (if needed), and tie-bar spacing).
- Electronics (working properly).

37

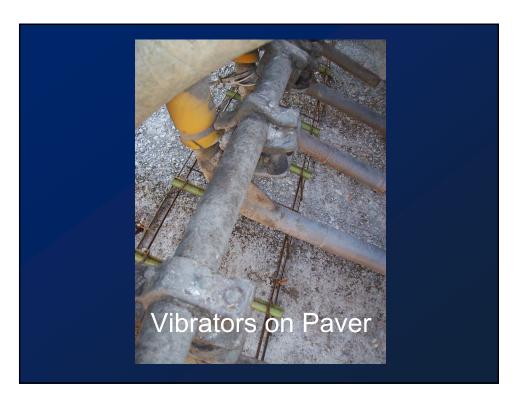



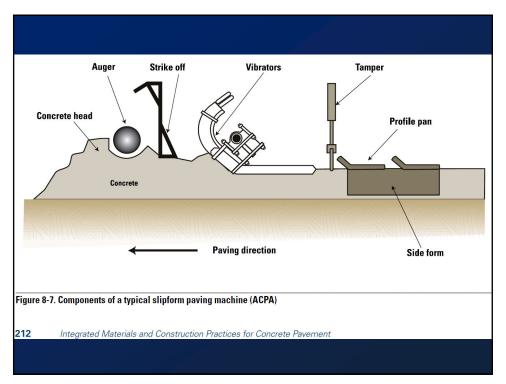

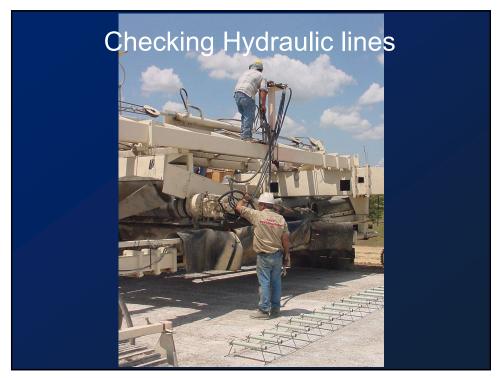





# **Pre-Paving Checks**


- Fixed Form Paving
  - Clean, straight, and correct dimensions
    - Straightedge between form joints (forms shall not deviate from true line more than ¼ inch at any point).
  - Initial eyeball check for irregularities.
  - Width between side forms.
  - String line depth check


# **Pre-Paving Checks**


- Secure forms (minimum 3 pins per 10-foot section).
- Concrete Spreader (specs. sec. 154.4 (a) )
  - a. Concrete Spreader. Use equipment to uniformly spread the concrete while maintaining a head of concrete.
  - The Engineer may waive the use of a self-propelled concrete spreader in areas of narrow or irregular dimensions.
- Finishing machine (specs. sec. 154.4 (b))
  - Proper Crown
  - Consolidation

45



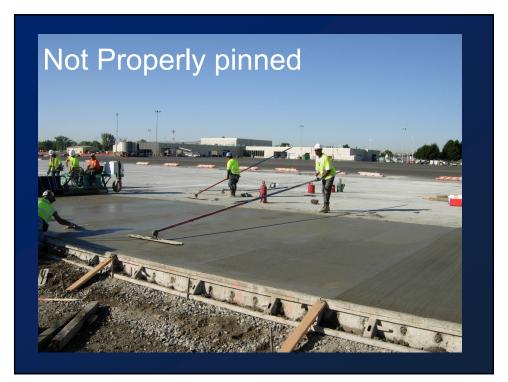

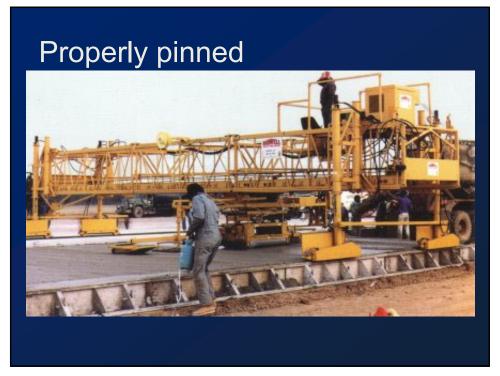

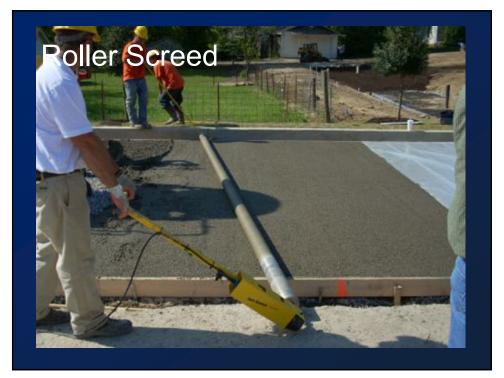











# **Pre-Paving Checks**

- Be thoroughly familiar with the plan detail sheets
  - Joint spacing and location
  - Reinforcement ((specs. sec. 501.4(c) / 502.3(c))
  - Pavement thickness and width
  - Superelevations, transitions and ramp tie-ins

55

### **Pre-Paving Checks**


- Hold a field meeting (between key KDOT personnel and contractor personnel)
  - Discuss the paving operations
  - Discuss staking of the project
  - String line set as per staked
    - Vertical and horizontal offsets
    - Eyeball check for gross irregularities
    - Tautness









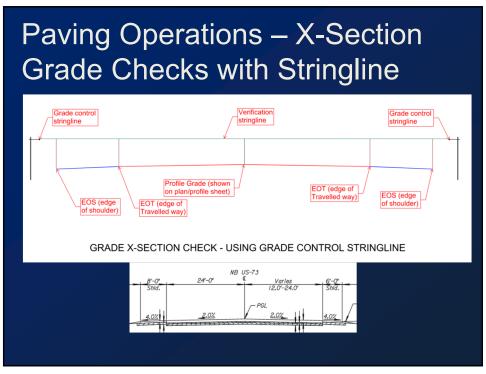

# **Pre-Paving Checks**

- Reinforcement (keyways, tie bars, mesh, dowel bars, etc)
  - Correct size
  - Correct location
  - Vertical and horizontal location
  - Secure in place
  - Dowel bars
    - Bond breaker lightly but thoroughly applied
    - Must be properly aligned
    - Location Marked outside of pavement edge
    - Baskets pinned in place

# Quiz

- Name a responsibility of the inspector
- What are the 2 types of concrete paving?
- How many pins per 10-foot section are required?

63


# **Dowel Bar Theory**

- Concrete pavement is divided into panels
  - Why?

# **Dowel Bar Theory**

What happens to the pavement strength at the cracks?


65

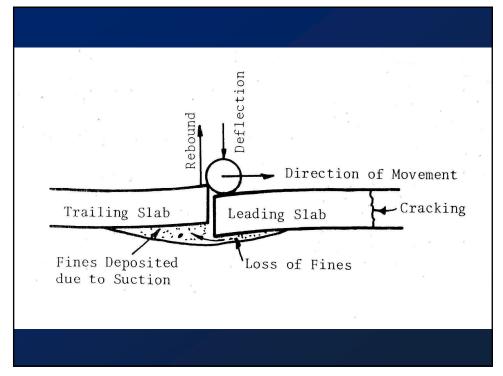

# **Dowel Bar Theory**

• How can this be avoided?

67

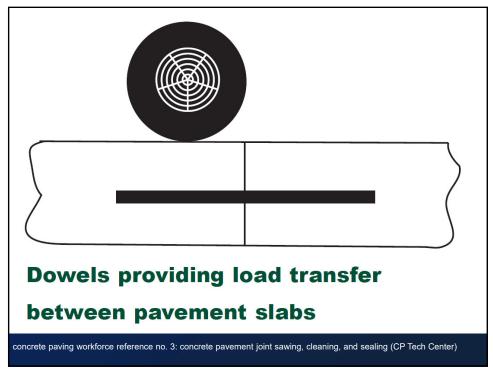

# **Dowel Bar Theory**

- What else happens at the joint?
- Expansion and Contraction
- Alignment of Dowels

69






















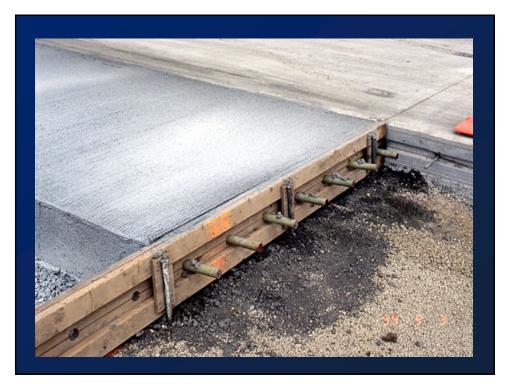

# Alignment

Why check the alignment of the dowel baskets?

81

### Alignment

 Failure of the pavement joint is guaranteed if the dowel basket is incorrectly placed. This check is very important!

# Tie Bars

- Longitudinal joints
- Tie adjacent slabs
- Controls lateral movement & faulting

83



### Tie Bars

- Misalignment (tilting) not as critical
- Middle 1/3 of the slab thickness
- Often inserted during paving

85











# **Paving Operations**

- Safety
- Subgrade
- Reinforcing
- Concrete Delivery
- Testing
- Placement
- Consolidation

91

### **Paving Operations**

- Finishing
- Texturing
- Curing
- Cold Weather
- Sawing/Jointing

#### Paving Operations - Safety

- Be Safety Conscious
  - Equipment
  - Distractions
  - Visibility

93

### Paving Operations - Subgrade

- The First Day
  - Walk the grade out front throughout the day and subsequent days
    - Review subgrade
    - Review string line
    - Review reinforcement
    - Review of anything not looking correct













# Paving Operations - Delivery

Time Requirements - 401.8 Standard Specification

Variables			
Plant Type	Delivery	Admixtures	Temp
Batch	Agitating	Set retarder	Air
Central Mix	Non- Agitating	None	Concrete

101







### Paving Operations - Testing

- Concrete Consistency and Testing
  - Properties/Tests requirements and limitations (specs. sec. 400)
  - Testing Frequency (Construction Manual Part V)
    - Different For QC/QA and Non-QC/QA
    - Perform initial tests quickly
    - Make adjustments

105


















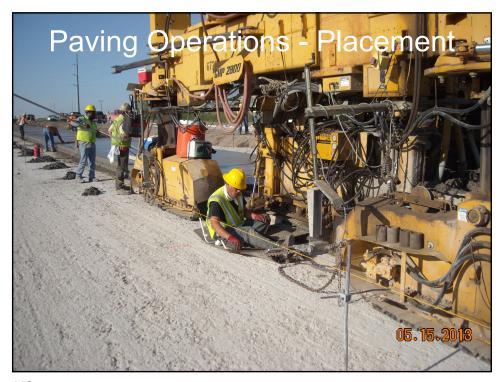

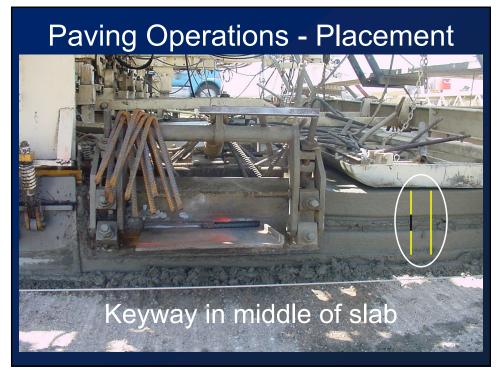





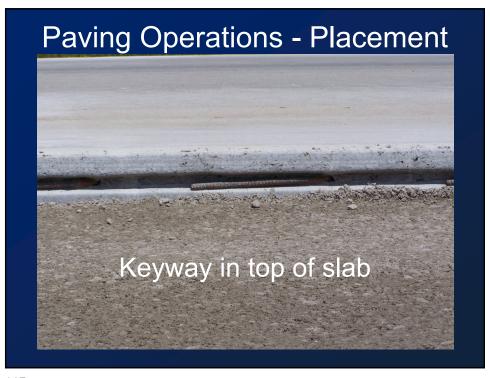

# Paving Operations - Consolidation

- Consolidation 154.2e
  - Uniform
  - 98% Density
  - Hand vibrators 5-15 seconds
  - Hand Vibrators immersed/withdrawn vertically - slowly

### Paving Operations - Consolidation

- Consolidation
  - Keep workers out of the concrete, if not necessary
    - Vibrate footprints
  - Even continuous amount of concrete above the vibrators
  - No vibrator contact with reinforcement, forms, etc.

119



















# Paving Operations - Finishing

- Finishing
  - Hand finishing should be kept to a minimum
  - Straightedge surface to remove high spots and locate low spots
    - Minimum 10 feet in length
    - Advance in successive stages of less than ½ the length of the straightedge
  - Remove surface irregularities
  - Repair edge slumps before concrete sets
    - Slumps in excess of .25 inch, excluding edge rounding
    - Discontinue paving if problems continue
  - Finish edge of pavement to the correct radius

129









# **Paving Operations**

- Finishing
- Texturing
- Curing
- Cold Weather
- Sawing/Jointing

# **Paving Operations - Texturing**

- Micro-texture
  - Damp burlap drag
  - Drug after surface moisture disappears
  - Full pavement width

135

### Paving Operations - Texturing

- Macro-Texture
  - Tining
    - Longitudinal unless otherwise noted
    - Proper spacing, width and depth
    - Correct time-not too wet, not too dry















## Paving Operations - Curing

- Why cure?
- Curing preserves water for cement hydration, maximizing pavement strength and durability.
- Helps prevent the surface from drying out quicker than the rest of the slab, which could damage the surface, due to differential shrinkage.

## Paving Operations - Curing

- Timing
- Walking/equipment not permitted on the surface
- This may be permitted once the pavement has cured sufficiently, and no damage is being done to the surface.

145


## Paving Operations - Curing

- Acceptable curing material (Prequalified List (PQL)) – 501.4i(1)
  - White polyethylene sheeting
  - Curing blankets
  - Wet Burlap
  - White liquid membrane-forming compound
    - Minimum 1 gallon/ 150 square feet including the sides
    - Do not thin white membrane curing compound







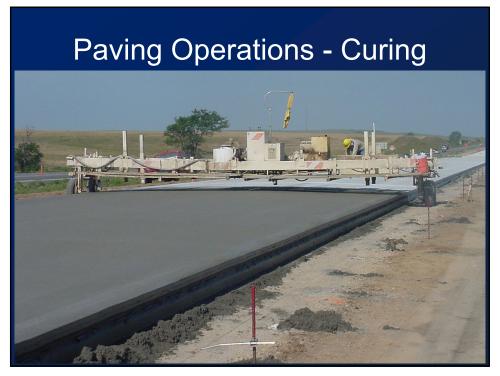










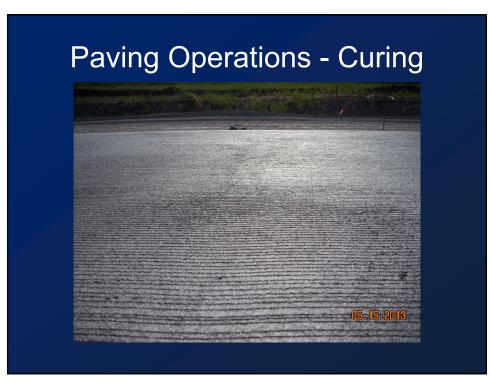

## Paving Operations - Curing

 The white polyethylene sheet acts as a moisture barrier and reflects sunlight, which keeps the slab from overheating. Do not use clear or black polyethylene sheeting, this material absorbs heat from sunlight.

## Paving Operations - Curing

- Cure Period 501.4i(3)a
  - Flexural strength ≥ 450 psi
  - 10-day cure period if flexural strength 450 psi
  - 12 hours before removing forms.
    - Substitute cure material

157

#### Class Exercise

 A Contractor slip form paved 1000 feet long by 24 feet wide by 12 inches deep.

How much White Liquid Membrane-Forming Compound should be used for cure? Applied at 150 ft<sup>2</sup> per gallon.

#### Solution

- 1000 feet X 24 feet = 24,000 ft<sup>2</sup>
- 1000 feet X 2 sides X 1 foot = 2,000 ft<sup>2</sup>
   26,000 ft<sup>2</sup>
- 26,000 ft<sup>2</sup> / 150 ft<sup>2</sup> per gal. =173.33
- ~ 174 gallons

159

#### Class Exercise

 A Contractor paved 2500 feet long by 22 feet wide by 11 inches deep in fixed forms.

How much White Liquid Membrane-Forming Compound should be used for cure? Applied at 150 ft<sup>2</sup> per gallon.

## Solution

- 2500 feet X 22 feet = 55,000 ft<sup>2</sup>
- Nothing for the sides (forms) \_\_\_\_\_ 0 ft<sup>2</sup>
   55,000 ft<sup>2</sup>
- 55,000 ft<sup>2</sup> / 150 ft<sup>2</sup> per gal. = 366.67
- ~ 367 gallons

161

## Video

• Concrete Paving Operations

#### Paving Operations – Cold Weather

- Cold Weather Placement Limitations (specs. sec. 401.8(b))
  - Do not begin paving until air temp is 35° F and rising and is expected to exceed 40° F
  - Paving shall stop when the descending air temperature reaches 40° F
  - Do not place concrete on frozen sub grade or use frozen aggregates in concrete

163

#### Paving Operations – Cold Weather

- Cold Weather Curing (specs. sec. 501.4(i) / 502.3(i))
  - Maintain a minimum surface temperature of 40° F for a minimum of 4 days after placement
  - Suitable blanketing material shall be close (such as straw, hay, burlap, concrete blankets, etc).
  - If the expected temperature is to drop below 35° F any time during the curing period precautions shall be taken.

# **Paving Operations**

- Finishing
- Texturing
- Curing
- Cold Weather
- Sawing/Jointing

165

# Paving Operations – Saw/Joint

- Different types of joints
  - Pressure Relief (Bridge Approach Pavement)
  - Contraction Joints
    - Sealed
    - Unsealed
  - Longitudinal Joints
  - Construction Joints









# Paving Operations – Saw/Joint

- Joints (specs. sec 500 and Plan Detail Sheets)
  - Create a plane of weakness in the fresh concrete before uncontrolled cracking occurs
  - Various methods, sawing is the most common
  - No wider than the initial saw cut (single pass) and to a depth of D/3 ± 1/4 inch.
  - 501.4 or 502.3 For joint sealing specifications













#### Paving Operations – Saw/Joint



177

## Paving Operations – Saw/Joint

- Sealing joints
  - Location, size, configuration and acceptable joint sealant shall be shown on the plans.
  - Unless other wise shown on the plans or in the Contract seal joints as follows
    - <u>Transverse joints</u> shall be sealed with preformed elastomeric compression joint seals
    - Longitudinal joints shall be sealed with either cold applied chemically cured joint sealant or a hot type joint sealing compound.
  - Only one type of longitudinal joint sealant shall be used on a project, unless otherwise approved by the Engineer.


## Paving Operations – Saw/Joint

- Joints shall be sealed before opening to traffic.
   For construction traffic, the contractor shall protect the joint from foreign material getting into the unsealed joint by an approved method.
- Contractor shall have a technical representative of the joint sealant present during installation of the sealant. (may be waived by the Engineer)
  - Guidance on cleaning
  - Guidance on preparation
  - Guidance on installation

179

# Paving Operations – Saw/Joint



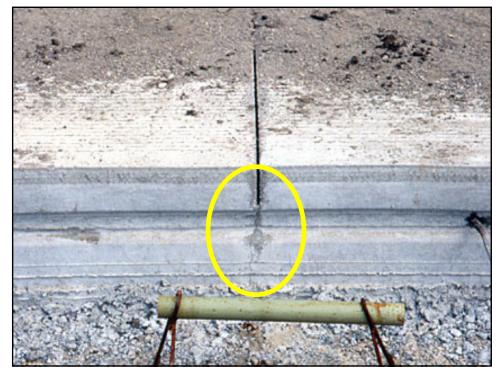









#### Paving Operations – Saw/Joint

#### Sawed (non-sealed) Joints

- 1 cut
- 1/8" wide
- $D/3 \pm \frac{1}{4}$ "
- Clean
- Backer rod while under construction
- Seal joints sawed ≥ ¼" with Hot Applied Joint compound

187

#### **Defective Pavement Repair**

- Each section of pavement must be inspected for defects.
  - Walking the slab is the most effective method.
  - Constant day-to-day visual observance/inspection.







## **Defective Pavement Repair**

- Each section of pavement with defects must be repaired by the contractor.
  - Repair depends on the type of pavement
    - Reinforced
    - Non-Reinforced
  - Repair also depends on the degree and location of the defect within a given pavement panel.
  - See 501.4(k) special provision for QC/QA
  - See 502.3(k) special provision for non-QC/QA

## **Defective Pavement Repair**

- Spalls
  - Patch Size
  - Patch Location
  - Patch Material

193

## Defective Pavement Repair

- New, Reinforced, Non-Reinforced, Dowel Jointed, Plain, and Shoulder
  - Transverse/Diagonal Cracks
    - Full Depth
    - Partial Depth
  - Longitudinal Cracks

#### **Pavement Thickness**

- Tolerance In Pavement Thickness (Non-QC/QA)
  - Constructed thickness will be determined by the average height measurement of the cores representing each pavement unit.
  - If pavement is less than the specified thickness treat it as specified in table 502-1
  - Pavement more than 1 inch deficient is to be removed (table 502-1)


195

#### **Pavement Thickness**

- Pavement Thickness (QC/QA)
  - Included in pay adjustment equations
  - Price adjustments are made for sections of pavement that are 1 inch deficient or less (table 502-2)





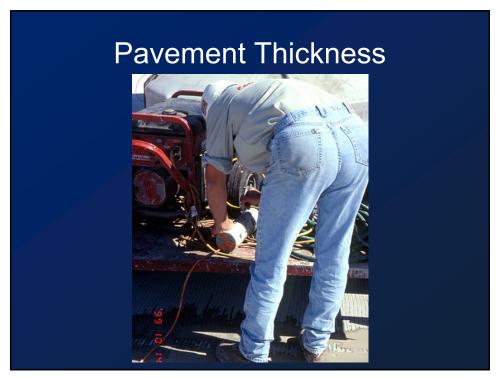

Pavement Thickness																				
REC	ORD	OF	CORE																	
Date	Loca: Sta	-ion Dist to &	Plan Thickness	Actual Measured Thickness	Deficienc	¥.		topor Cont Cont price alloy	act			Re	me	ark	15		-1.	In	ISP	
						J											 			
						$\cup$														
	o						E-TRE . DW 127										 			
							44.47									T				
		9				$\overline{}$														
		,						Ш	П						П		TI	Ш		I

## Pavement Smoothness (503)

- Public Criticism
- Tied to Pay
- Profilograph
- 10 ft Straight Edge

201

#### **Pavement Smoothness**

- California type profilograph
  - Measures surface roughness
  - Contractor run machine
  - Certified Operator
  - Results within 2 working days

#### **Pavement Smoothness**

- Requirements vary depending on speed limit of the pavement being tested (table 503-1)
- If pavement fails to meet requirements corrective action must be taken (table 503-1)
  - Diamond grinding
  - Other approved profiling devices
  - · Remove and replace entire thickness of pavement
- Grinding Requirements (Table 503-2)
- Re-profile after repairs are made
- Pay adjustments will be made off results of initial profile index (table 503-3)

203

#### **Pavement Smoothness**

- 10 ft Straight Edge
  - Areas not subject to profilograph
  - Engineer's discretion
  - 1/8 inch in variation
  - Correct > 1/8-inch tolerance
  - Retest after correction

## **Pavement Smoothness**

- Pay Adjustments
  - Initial Reading
  - Continuously ground
  - Urban/Rural
  - Pavement Thickness after grind

205







#### **Documentation**

- Documentation Manual
  - http://www.ksdot.org/burconsmain/Connection s/ConstManual/documentationtindex.asp
- Construction Checklist
  - http://www.ksdot.org/burconsmain/Connection s/ConstManual/checklistindex.asp
  - Concrete Paving Diary Sample

209

#### KDOT References/Resources

- Approved Change Orders
- Project Plans
- Special Provisions
  - When there are some
- 2015 Standard Specifications
- Construction Manual
- Documentation Manual

# **Specifications**

- 501 QC/QA Paving
- 502 Non-QC/QA Paving
- 503 Pavement Smoothness
- 504 Dowel Bar Retrofit-Repair New PCCP
- 505 Tie Bar Insertion-Repair New PCCP

Concrete Batch Plant Inspection







1

# Reference Materials

- 2015 Standard Specifications
- Division 150 (Equipment)
- Division 400 (Concrete)
  - SP 15-04003 On-Grade Concrete (replaces section 403)
  - SP 15-04005-R04 General Concrete (replaces section 401)
- Division 1116 (Aggregates for On Grade Concrete)
  - SP 15-11004 R02(replaces section 1116)
- 2014 Construction Manual / 2022 Part V
- 4.06.05 Duties of a plant Inspector
- Appendixes A and B
- Documentation manual: http://www.ksdot.org/bureaus/burConsMain/Connection s/ConstManual/documentationtindex.asp



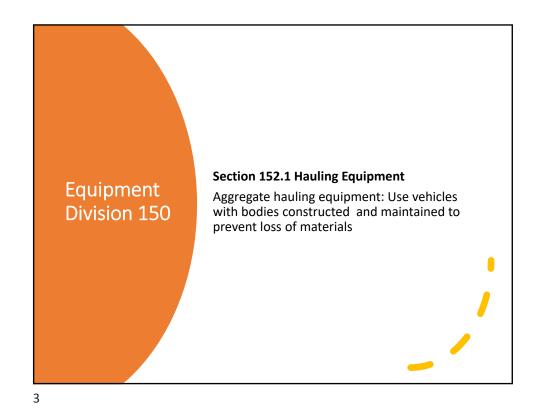

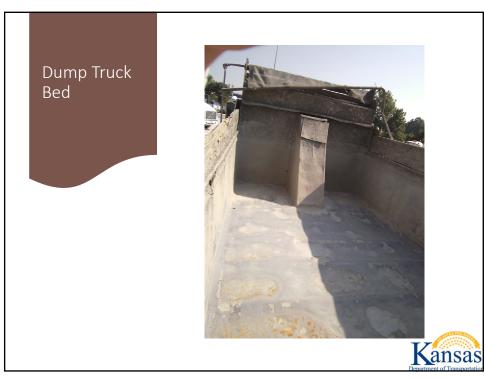

# Division 150 continued

### **Section 152.2 Weighing Equipment**

Weighing equipment needs to be tested and certified by licensed service company at:

### 6 month intervals

After each setup and before being used on the project.

When the weighing devices are repaired; and at any other time deemed necessary by the engineer.

\*Accurate to within 0.50%(per Errata Sheet) throughout the range of use



5

# Finding Errata information

	<u>DIVISION 150</u> - EQUIPMENT
<u>151</u> 152	COMPACTION EQUIPMENT HAULING AND WEIGHING FOUIPMENT
152	15-ER-1-R22 - ERRATA SHEET FOR STANDARD SPECIFICATION BOOK FOR STATE ROAD AND BRIDGE
<u>153</u>	CONSTRUCTION, EDITION 2015 MIXING PLANT FOR STABILIZED BASE AND SHOULDERS
<u>154</u>	CONCRETE PAVEMENT AND CONCRETE STRUCTURE EQUIPMENT  15-ER-1-R22 - ERRATA SHEET FOR STANDARD SPECIFICATION BOOK FOR STATE ROAD AND BRIDGE
	CONSTRUCTION, EDITION 2015
<u>155</u>	ASPHALT SURFACING AND ASPHALT PAVEMENT RECYCLING EQUIPMENT 15-01501 - ASPHALT SURFACING AND ASPHALT RECYCLING EQUIPMENT
<u>156</u>	ROADSIDE IMPROVEMENT EQUIPMENT
<u>157</u>	15-ER-1-R22 - ERRATA SHEET FOR STANDARD SPECIFICATION BOOK FOR STATE ROAD AND BRIDGE
156 157	OTHER EQUIPMENT

Return to Top



# Example of Errata Sheet



SECTION 152 HAULING AND WEIGHING EQUIPMENT

Page 150-4, subsection 152.2, second paragraph:

• The weighing devices shall be accurate to within 0.50% throughout the range of use.

SECTION 154
CONCRETE PAVEMENT AND CONCRETE STRUCTURE EQUIPMENT

Page 150-9, delete subsection 154.3 Subgrade Trimmers.

SECTION 155
ASPHALT SURFACING AND ASPHALT RECYCLING EQUIPMENT

Page 150-14, delete subsection 155.6h.(2)(b) and replace with the following:

(b) Reclaimed Asphalt Pawement (RAP) Material Conveyor. If the plant is used for recycling, a dual weighing system is required to control delivery of vising aggregate and RAP material to the drum. Equip the system with interfocking mechanisms that shall accurately deliver virgin aggregates and RAP material in proper proportions. Belt scales for the RAP material shall comply with subsection 155.6h.(2).

# SECTION 157 OTHER EQUIPMENT

Page 150-19, add the following: 157.4 SUBGRADE TRIMMERS Use a standard manufacture rotary drum subgrade trimmer that is automatically controlled (from a reference system) in regard to both line and grade.

SECTION 205 EXCAVATION AND EMBANKMENT FOR HIGHWAYS

 $Page\ 200-18,\ subsection\ 205.4j,\ delete\ the\ tenth\ paragraph\ on\ the\ page\ (Where\ a\ grass\ median...)\ and\ replace\ with\ the\ following:$ 

SECTION 214 MECHANICALLY STABILIZED EARTH FILL

Page 200-29, subsection 214.2e. replace "ASTM A82" with " ASTM A1064" throughout entire subsection.


SECTION 501
PORTLAND CEMENT CONCRETE PAVEMENT

Page 500-4, subsection 501.3, delete third line and replace with the following:

Reinforcing Steel \_\_\_\_\_\_DIV 1600/SEC 711



# Scale Certification

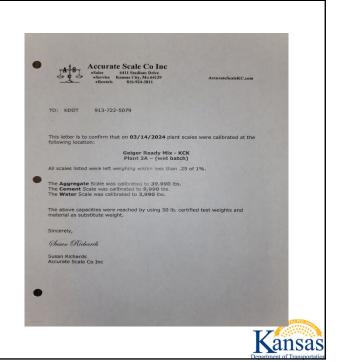

# Water Calibration

Water can either be weighed or metered into the batch. Usually if it is weighed the scale company will calibrate it. If it is metered either the inspector or the scale company can certify the accuracy.

Water accuracy must be within 1% or less

• Sec 154.1b



a

# Admixture Measurement

- All admixtures being utilized must be calibrated every 6 months.
- Admixture calibration is similar to calibrating metered water.
- The computer batches a theoretical amount and the actual batched amount is compared.
- Admixtures need to be accurate to within 3%.



Admixture metering devices





11

Admixture dispensing






# Admixture holding tanks






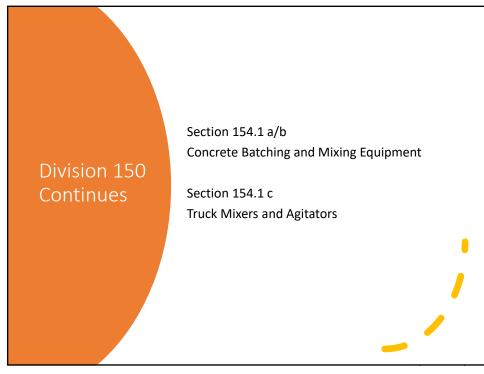


Number of Superision		REPORT ON SURVEY OF REA	Date	
DOT Form 618  11. Plant  Type of Plant Make		I. General	Date	
Date of Previous Impection Phone No.    Date of Previous Impection   Phone No.		Name of CompanyAddress	Owned By	
II. Plant  Type of Plant Operation Plant Make Capacity of Plant Correcte Plant Make Capacity of Plant Correcte Equipment for Cold Weather Concrete Type Pacified for Testing and Impecting Materials Concrete Testing Equipment Concrete Testing Equipment Concrete Testing Equipment  III. Cement - Fly Ash  This info is  Reded to Plant Equipment for Fly Ash Type of Separate Storage Units for Coment Plant Equipment for Fly Ash Type of Separate Storage Units for Coment Plant Equipment for Fly Ash Type of Separate Storage Units for Fly Ash Type of Separate Storage Unit for Fly Ash Type of Separate Storage Units for Fly Ash Units Florage Units Storage Units Florage Units Storage Units Florage	DOT 5 640		Phone No.	
Flain Make Capacity of Plain Equipment for Cold Weather Concrete Equipment for Cold Weather Concrete Flain and Inspecting Materials Concrete Testing Equipment Concrete Testing Equipment Flain Supplement for Ply Ash  III. Cement - Fly Ash  Number of Separate Storage Units for Cement Flain Equipment for Ply Ash Type Capacity Type Capacity Type Capacity Type Capacity Tare Adjustment Accurate to 0.25% Smallast Scale Increment Discharges Compete Method Provided to Safely Obtain Sample from Stream  IV. Aggregates  IV. Aggregates  IV. Aggregates  V. Scales Adae Correct Back to Basch Moisture Variations Method Used to Correct Back to Basch Moisture Variations Method Used to Correct Back to Basch Moisture Variations Method Used to Correct Back to Basch Moisture Variations  V. Scales - General	DO1 Form 618	II. Plant		
Cupacity of Plant Equipment for Cold Weather Concrete Provisions for time Marked Tickets How Provisions for time Marked Tickets Concrete Testing Equipment  Also used annually to reverify that the plant sti the plant sti the plant sti the plant sti Conforms are producer producer number for a new plant  IV. Aggregates Scale Make Copacity Date of Laste Scale Certification Ward Provision Ward Provision Date of Laste Scale Certification Ward Provision Date of Laste Scale Certification Ward Provision Date of Laste Scale Certification Ward Protection Provision Scale Make Copacity Date of Laste Scale Certification Date of				
Equipment for Cold Weather Concrete   Type		Plant Make	Warra David and and another hand	
Provisions for fine Markot Tickets Reclibes for Testing altogeting Materials  Concrete Testing Equipment  III. Cement - Fly Ash  Number of Separase Storage Units for Cement  Plant Equipment for Ply Ash  Type of Separase Storage Units for Separase Storage Units for Fly Ash  Type of Separase Storage Units for Fly Ash  Seale Make  Type of Separase Storage Units for Fly Ash  Seale Make  Capacity  Under Protection  Date of Lastes Scale Certification  Date of Lastes Scale Certification  Date of Lastes Scale Certification  Method Proviced to Safety Oftenia Sample from Stream  IV. Aggregates  Scale Make  Capacity  Seales Scale Make  Capacity  Date of Lastes Scale Certification  New Journal Often Separase Storage Units for Cement  Date of Lastes Scale Certification  New Journal Often Separase Storage Units for Cement  Scale Make  Capacity  Seales Scale Make  Capacity  Seales Scale Scale Scale Scale Scale Increment  Seales Scale Scale Scale Scale Scale Increment  Seales Scale Scale Scale Scale Scale Increment  Capacity  Seales Scale Scale Scale Scale Increment  Seales Scale Scale Scale Scale Increment  Seales Scale Scale Increment  Seales Scale Increment  Capacity  Seales Scale Increment  Seales Scale Increment  Seales Scale Increment  Capacity  Seales Scale Increment  Seales		Equipment for Cold Weather Concrete	Type	
This info is needed to Obtain an AWP producer I and I		Provisions for time Marked Tickets Facilities for Testing and Inspecting Materials	How	
This info is  needed to  Obtain an AWP  producer  number for a  new plant  III. Cement - Fly Ash  Number of Separase Storage Units for Cement  Plant Equipment for Fly Ash  Type of Postive Lock-Out Device for Fly Ash  Type of Separase Storage Units for Fly Ash  Type of Postive Lock-Out Device for Fly Ash  Scale Make  Capacity  Tare Adjustment  Method Provided to Safethy Obtain Sample from Stream  IV. Aggregates  Scale Centification  Walf Protection  Walf Protection  Positive Control of Material into Weight Bopper  Knife Edges Chem Fly  Method Provided to Safety Obtain Sample from Stream  Method Used to Determine Aggregate Moistures  Method Used to Determine Aggregate Moistures  Method Used to Correct Bach to Batch Moisture Variations  V. Scales - General		Concrete Testing Equipment		
This info is  needed to  obtain an AWP  producer  number for a  new plant  IV. Aggregates  Social Male  Cupacity  Type  Method Provided to Safely Obtain Sample from Stream  Los. Out Device Out of Material into Weigh Hopper  Method Provided to Safely Obtain Sample from Stream  Method Used to Device Sample Flore  Wall Procession  Now Determined  Now Determined  Type  Separate Ropper and Scales  Social Male  Cupacity  Method Provided to Safely Obtain Sample from Stream  Now Determined  Now De				Also used
This info is  needed to  obtain an AWP  producer  number for a  new plant  IV. Aggregates  IV. Aggregates  Very Method Provided to Salely Obtain Sample from Stream  IV. Aggregates  Very Method Provided to Salely Obtain Sample from Stream  Need Note Provine on Py Ash  Type of Separate Storage Unit for Fy Ash  Seallest Scale Increment  Tan Adjustment Accurate to 0.25% Separate Repoper and Scales Cana  hasn't conforms are Needed to Salely Obtain Sample from Stream  IV. Aggregates  Very Method Provided to Salely Obtain Sample from Stream  IV. Aggregates  Very Separate Comparaments  Date of Laste Scale Certification  Wind Proviction — Positive Control of Material into Weight Hopper  Kalle Edges Chem Endy Method Provided to Salely Obtain Sample Sample From Stream  Method Used to Determine Aggregate Molitures  Method Provided to Salely Obtain Stream  Method Used to Correct Bach to Batch Moliture Variations  V. Scales - General				annually to
needed to Obtain an AWP pro of Postive Lock-Out Device for Fly Als Stale Make Clinicity Type of Postive Lock-Out Device for Fly Als Type of Separate Storage Unit for Fly Als Type Clinicity Stale Make Clinicity Tara Adjumment Tara Adjumment Accurate to 0.25% Separate Elopper and Scales The of Lands Scale Certification Discharges Competely How Determined Method Provided to Safely Obtain Sample from Stream  IV. Aggregates  Very Clinicity Tara Adjumment Tara Adjument Tara Adjumment Tar		III. Cement - Fly Ash		•
needed to Obtain an AWP Dotain an AWP producer number for a new plant  1V. Aggregates  Scale Make Copacity Date of Laster Scale Certification Discharges Competed Method Provided to Safety Obtain Sample from Stream  1V. Aggregates  Scale Make Copacity How Determined Method Provided to Safety Obtain Sample from Stream  1V. Aggregates  Very Scale Make Copacity Date of Laster Scale Certification Discharges Competed Method Provided to Safety Obtain Sample from Stream  1V. Aggregates  Scale Make Copacity Date of Laster Scale Certification Date of Laster Scale Certification for Removal of Overload Method Provided to Safety Obtain Sample from Stream  Date of Laster Scale Certification Wand Protection Date of Laster Scale Certification Date of Laster Date of L	This info is	Number of Seperate Storage Units for Cement	Type	reverity that
Obtain an AWP producer number for a new plant  IV. Aggregates Scale Make	nooded to	Plant Equipment for Fly Ash Type of Type of Postive Lock-Out Device for Fly Ash	Separate Storage Unit for Fly Ash	the plant stil
producer number for a new plant  IV. Aggregates Scale Make Capacity Tax Adjustment Discharges Completely Method Provided to Safely Obtain Aggregate Moisture Method Used to Determine Aggregate Moisture Method Used to Correct Back ho Batch Moisture Variations  V. Scales - General	needed to	Scale Make	Type	
producer number for a new plant  IV. Aggregates Scale Make Capacity Tax Adjustment Discharges Completely Method Provided to Safely Obtain Aggregate Moisture Method Used to Determine Aggregate Moisture Method Used to Correct Back ho Batch Moisture Variations  V. Scales - General	obtain an AWP	Tare Adjustment Accurate to 0.25%	Smallest Scale Increment     Separate Hopper and Scales	conforms an
number for a new plant  IV. Aggregates  Scale Make  Capacity That Adjuncted to 0.25% Sealers Compartments Sequence Compartments Sequ		Wind Protection Hopper Vented and Seal	ed Knife Edges Clean	bace/+
number for a  new plant  IV. Aggregates  Scale Make Capacity Tare Adjustment Date of Latest Scale Certification Wind Protection Positive Control of Material into Weight Ropper Keile Edges Chem etc. Wind Protection Positive Control of Material into Weight Ropper Keile Edges Chem etc. Weight Protection Positive Control of Material into Weight Ropper Keile Edges Chem etc. Weight Protection Positive Control of Material into Weight Ropper Weight Ropper Weight Protection Protection Weight Determined Aggregate Moistures Method Used to Determine Aggregate Moistures Method Used to Correct Ratch to Batch Moisture Variations  V. Scales - General	producer	Discharges Competely How Deter	mined	nasn t
Scale Male Capacity Type Capacity Smallest Scale Increment Smallest Scale Increment Smallest Scale Increment Sealer Compartments Date of Latest Scale Certification Wind Protection Positive Control of Material into Weigh Hopper Knife Edigas Cleam Discharges Completely Method Provided to Safely Obtain Aggregate Sample From Stream Method Used to Determine Aggregate Mointure Method Used to Correct Bach to Batch Moisture Variations  V. Scales - General	number for a	Method Provided to Salely Obtain Sample from Stream		changed
Scule Male Capacity Type Capacity Tare Adjustment Tare Adjustment Tare Adjustment Date of Latest Scale Certification Wind Protection Wind Protection Positive Control of Material into Weigh Hopper Knife Edgas Cleam Discharges Completely Method Provided to Safely Obtain Aggregate Sample From Stream Method Used to Determine Aggregate Moisture Method Used to Orrere Basch to Basch Moisture Variations  V. Scales - General	n accordant	IV. Aggregates		anything
Tare Adjustment Accounts to 0.25% Separate Compartments Date of Latest Scale Certification Wind Protection Positive Control of Material into Weight Hopper Kinfe Edges Clean Discharges Completely Method Provides to Safety Obtain Aggregate Sample From Stream Method Provides to Safety Obtain Aggregate Sample From Stream Method Used to Determine Aggregate Moisture? Method Used to Correct Basch to Batch Moisture Variations  V. Scales - General	new plant	Scale Meles	Toma	arrything
Tare Adjustment Accounts to 0.25% Separate Compartments Date of Latest Scale Certification Wind Protection Positive Control of Material into Weight Hopper Kinfe Edges Clean Discharges Completely Method Provides to Safety Obtain Aggregate Sample From Stream Method Provides to Safety Obtain Aggregate Sample From Stream Method Used to Determine Aggregate Moisture? Method Used to Correct Basch to Batch Moisture Variations  V. Scales - General		Capacity	Smallest Scale Increment	
Wind Protection Positive Control of Material into Weigh Hopper Knife Edgas Cleam Dischages Completely Method Provided to Sately Obtain Aggregan Sample From Stream Method Provided to Sately Obtain Aggregan Sample From Stream Method Used to Determine Aggregane Moisture Method Used to Correct Basch to Basch Moisture Variations  V. Scales - General		Tare Adjustment Accurate to 0.25%	Separate Compartments	
Kuife Edgas Clean Over-Under Indicator in Operation Dischapses Completely How Determined Method Provided a Sariely Obtain Aggregate Sample From Stream Method Provided in Sariely Obtain Aggregate Sample From Stream Method Used to Correct Batch to Batch Moisture Variations  V. Scales - General		Date of Latest Scale Certification	Provisions for Removal of Overload	
Dischages Completely How Determined Method Provided to Safely Obtain Aggregate Sample From Stream Method Used to Determine Aggregate Moisture Method Used to Correct Bach to Batch Moisture Variations  V. Scales - General		Knife Edges Clean	Over-Under Indicator in Operation	
Method Used to Determine Aggregate Moistures Method Used to Correct Batch to Batch Moisture Variations  V. Scales - General		Discharges Completely How Determin	ed	
Method Used to Correct Batch to Batch Moisture Variations  V. Scales - General				
500# of Test Weights Available All Devices in View of Operator		V. Scales - General		THA PLAN
		500# of Test Weights Available	All Devices in View of Operator	T
Page I		Page	T .	Cong

	VI. Water	
	Type of Measuring Device	
	Equipment for Easy Calibration How	
	Accurate to 1% • Water Source	
	VII Admixtures	
	Type of Measuring Device Make Measuring Device Automatic Visual Accuracy of Measurement 3% *	
	Admixture Type; (brand) AE	
	VIII Mixer	
	Transit Mixers	
	Number Make Capacity Mixing Aginting	
Famos C10		
Form 618		
1 31111 3 ± 3		
page 2		
Page 2		
	Counter Type Make Manufacture's Metal Plates in Place , Clean and Readable	
	Manufacturers Literature Available; Hatch in Drum Periphery Mixer Wash Water Handled Properly	
	Type of Calibrated Water Measuring Device	
	Central Mix	
	Make Timing Device Automatic	
	Type of Timing Device How Determined How Determined	
	Blades Clean Discharge Boot in Good Condition	
	Agitation Equipment	
	Number Make Capacity	
	Page 2	
		TRAFFIC I
	T///	
	K or	100

Form 618 Page 3	VIII. Mixers (continued)  Non splation Epiginest  Number.
	Date Inspected
	* Indicates items to be checked by the Field Engineer prior to use of plant on department work  Page 3
	Kansas Department of Transportation

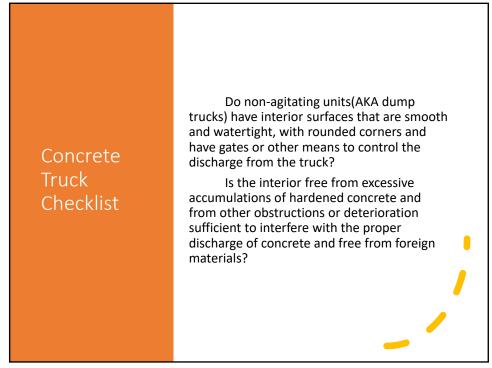

Corners are trouble spots for build-up

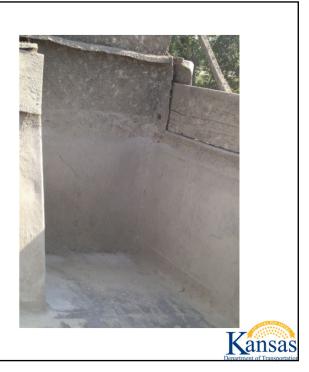


19

Periodic cleanouts throughout the day are necessary to avoid buildup





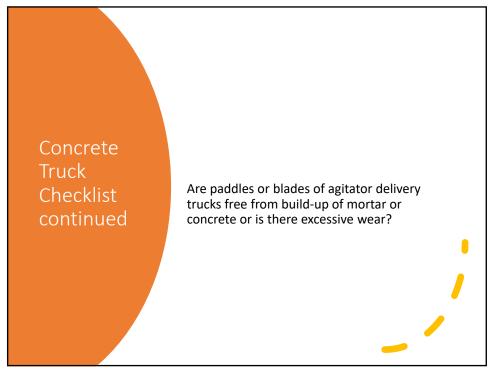



Agitor truck





23

Concrete Truck Checklist continues

Check for the manufacturer's capacity plate on the ready mix trucks, which shows the volume of concrete which can be effectively mixed or agitated within the drum, and the recommended mixing and agitating speed.


# Ready-Mix trucks should have a manufacturers plate




25

# More typical manufacturers plate



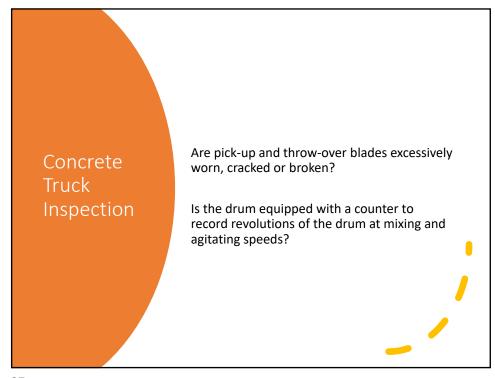




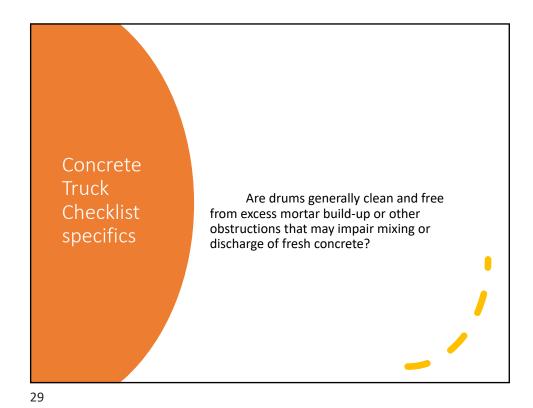

Ready Mix Drum Interior





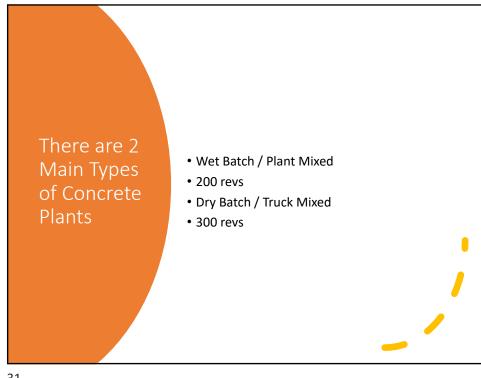

# Central and On-Site Concrete Mixers (Wet Batch)

Section 154.1b Page 150-6

- Use standard manufacturer concrete mixers capable of combing aggregate, cement/fly ash, water and admixtures into a uniform mixture within the specified mixing period. Use mixers capable of discharging the concrete without segregating the mixture.
- Additional requirements for central and on-site concrete mixers:
- A manufacturer's plate attached to the mixer listing the capacity of the drum (volume of mixed concrete) and the speed of rotation of the mixer drum or blades.
- A timing device that automatically locks the discharge lever when the drum is charged and releases it at the end of the mixing period.
- A warning device, either audible or visible, that signals the release of the discharge lever (end of mixing period)
- An automatic water measuring device (measured either by weight or volume, accurate to within 1% of the quantity required) capable of discharging the desired quantity of water into the mixer drum.
- A semi automatic, air entraining agent measuring device capable of discharging the desired quantity of air entraining agent into the flow (of the mixing water) of the water discharge line.
- Routine cleaning is necessary to ensure consistent concrete



# Truck Mixers and Agitors (Dry Batch)

Section 154.1c

- Truck Mixers. Use standard truck mixers capable of combing aggregates, cement/fly ash, and water and admixtures into a uniform mixture within the specified number of revolutions (70 to 100) without segregating the mixture.
- Requirements:
- A drum of appropriate size for the batched dry concrete
- A manufacturers plate attached listing mixing and agitating speeds and capacities.
- A revolution counter
- Truck Agitators. Use standard manufacture truck agitators capable of agitating and discharging the concrete without segregating the mixture.
- Requirements:
- A drum of appropriate size not to exceed 80% of gross volume of expected batch.
- A manufacturers plate attached listing agitating speeds
- A revolution counter
- · Routine cleaning is necessary to ensure consistent concrete.





# Division 400

Section 401 General Concrete Replaced by SP 15-04005 R04

Section 402 Structural Concrete

Section 403 On Grade Concrete Replaced by SP 15-04003



35

## Section 401

Special Provision 15-04005 R04 Sheet 1 and 2

## **Concrete Mix Design**

Design concrete according to contract documents

Take full responsibility of actual proportions of the concrete mix

Provide aggregate gradations that comply with Division 1100

Submit all concrete mix designs to the engineer for review and approval. Submit completed volumetric mix designs on KDOT form 694 and all required attachments at least 60 days prior to placement of concrete. The engineer will provide an initial view of the design within 5 business days following submittal.

Once approved a concrete mix cannot be changed without resubmitting test data confirming continued compliance. A mix design will remain approved provided it has been appropriately tested and verified within the last 12 months.



# $15\text{-}04005 \ R04 \ _{\text{Sheet 6 of 13 } 401.3 \ K(5)}$

- Do not add water after plasticizer is added to the concrete mixture.
- (5) Field Adjustment to Admixtures, Limited adjustments to the dosage rate of accelerators, set-retarders, water reducers, and air-entraining admixtures are permitted to compensate for environmental changes during placement without a new concrete mix design or trial batch. Test the concrete for temperature, air content, and slump whenever changes are made to the dosage rates to ensure continued compliance with the specifications. The allowable adjustments are based on the dose used in the Approved Concrete Mix Design and according to the following:
- Do not exceed the accelerator dosage used in the Approved Concrete Mix Design. The accelerator
- dosage may be reduced or eliminated as needed. Redosing accelerators is not permitted
- · 

  The water reducer dosage used in the Approved Concrete Mix Design sets the minimum permitted dose
- for use in the field. The water reducer dose may be increased from that shown in the Approved Concrete
- Mix Design provided that the slump does not to exceed the maximum designated slump. Slump
- reduction may be obtained by withholding a portion of the mix water as specified in subsection 401.8a
- © Redosing of water reducers and air-entraining admixtures is permitted to control slump or air content in
- the field, when approved by the Engineer, time and temperature limits are not exceeded, and at least 30
- mixing revolutions remain before redosing. Redose according to manufacturer's recommendations.
  - Set retarders may be added as needed during production. Do not include set retarders in the Concrete
- submitted for Mix Design Approval. Redosing retarders is not permitted. Paperwork for submitted mix
- designs (Form 694) with no (zero) water reducer and/or set retarder in the original Concrete submitted
- for Mix Design Approval must show the manufacturer of the admixtures that may be included in the
- Project Concrete.

37




KDOT Form Number 694

### KDOT Form 694 KANSAS DOT CONCRETE MIX DESIGN PRINT ALL REQUIRED PAGES 46 KA 4291-01 Spec Max W/C Project Number Design Air 6.5% Contract Number Concrete Class Design W/C Spec Min CF Design Slump GEIGER READY MIX Concrete Producer Design CF (includes all cementitious) Aggregate Designation \*Fields are required for batch calculcations MA-3 Official Amount Producer Material Type or Name Name ID Number in Mix\* Gravity Quality Aggregate No. 1 Aggregate No. 2 Aggregate No. 3 Martin Marietta Stamper Quarry Holliday Sand & Gravel Plant 3 00803510 00815412 15-2654 13-1245 2.64 42.0% Aggregate No. 4 Portland Type I/II Class F Fly Ash Buzzi Unicem, Cape Giradeau Other Cementitious No. Ashgrove, Chanute KS (Durapoz F 20.0% 2.80 Other Cementitious No. Water Air Entraining Admixture Daravair 1400 Grace 8.46 Admixture No. 1 Admixture No. 2 Grace 50.76 2% Amount in Mix column: Use whole number percentages (i.e. 40 or 15) for aggregates and cementitious materials; assume oz/cy for admixtu Note: Water adjustments should be made when admixtures are used at large dosages (i.e. dosages of accelerators, corrosion inhibitors, SRAs, etc.) Mix Design Used Previous Yes KDOT Mix Design Number 1PMC174 (if known) Date Last Used ####### MIX DESIGN TEST RESULTS Please include the following information along with this completed form: **Materials Certifications** Air Content, % Slump, in. Compressive Strength Results (KT-76) Permeability Test Results (KT-73, KT-79, or AASHTO T-277) Reactivity Test Results (ASTM C 1567, if SCMs are used) Slump, in. Compressive Strength (28 day) Only one of KT-73 the three is KT-79 required: AASHTO T-277 ASTM C 1567 (if necessary) 7080.00 Please fill in the table to the right with the test results, in addition to providing hard copies of the actual test reports 17.7 CLICK TO SIGN Rusty Owings Geiger RM 913-555-5555 6/15/2016 NOTE: Please make sure that when this form is submitted to the construction or district office, ensure that all three (3) pages are included.

1

Printed on 6/15/2016

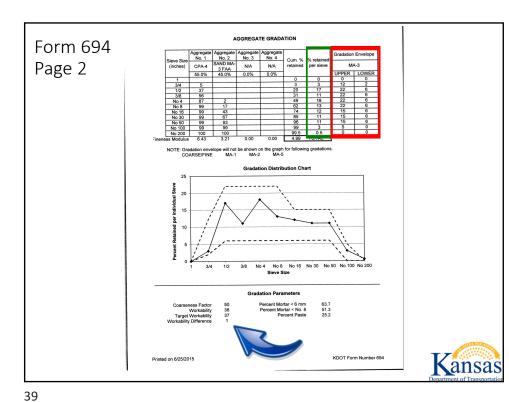

# Test Data For Mix Design

- Test data from KT-73 tested at 28 days, KT-79 tested at 28 days or AASHTO T-277 tested at 56 days for all bridge overlays, Moderate Permeability Concrete, and any project with over 250 cubic yards of concrete (this includes structural concrete, on grade concrete etc.).
- ➢ Single point grading for the combined aggregates along with a plus/minus tolerance for each sieve.
- Laboratory 28 day compressive strength test results on a minimum of 1 set of 3 cylinders produced from the mix design with the highest water to cementitious ratio for the project, utilizing all actual materials proposed for use on the project at designated percentages.
- Historical mix production data for the plant producing concrete for the project to substantiate the standard deviation selected for use in subsection 401.3b.
- Mix designs will remain approved when verification testing for strength and permeability conducted within the last 12 months.
- > Improvements in concrete strength, workability, durability and permeability are possible if the combined aggregate grading is optimized.
- ➤ With the exception of concrete for pavement as shown in SECTION 403, use the middle of the specified air content range of 6½ ± 1.5% for the design of air entrained concrete.
- > Maximum air content is 10%. Take immediate steps to reduce the air content whenever the air content exceeds 8%.



# **PERMEABILITY**

• KT-73 (Voids in Hardened Concrete aka Boil test) is the only one that actually tests permeability.

• AASHTO T277
(Rapid Chloride
Permeability) and
KT-79 (Surface
Resistivity aka
Resipod) are both
electrical
conductivity tests.








41

# RCP EQUIPMENT

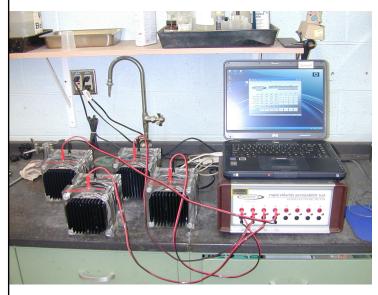



# SURFACE RESISTIVITY EQUIPMENT RESIPOD (KT-79)



Extension cable set

Mfgr: Proceq SA



43

# **BOIL TEST EQUIPMENT (KT-73)**





# 2" samples from cylinders or cores for the voids in hardened concrete test (Boil Test)





45

# TABLE 401-2: ALLOWABLE SUBSTITUTION RATE FOR SUPPLEMENTARY CEMENTITIOUS MATERIAL

Special Provision 15-04005-R04 Sheet 4

### **Material Substitution Rate\***

Slag Cement 40% Maximum
Fly Ash 25% Maximum
Blended SCM 25% Maximum
Natural Pozzolans 25% Maximum

Silica Fume 5% Max

Total Combined 50% max SCM

<sup>\*</sup> Total Substitution Rate includes material in pre-blended cements and blended SCMs



# TABLE 401-1: PORTLAND CEMENT & BLENDED HYDRAULIC CEMENT (15-04005-R04 Sheet 3)

Concrete for: Type of Cement Allowed

On Grade Concrete Type IP(x) Portland-Pozzolan Cement

Type IS(x) Portland- Slag Cement Type IT(Ax)(By) Ternary Blended Cement Type 1L(x) Portland-Limestone Cement

Type II Portland Cement

All Concrete other than On Grade Concrete.

Type I Portland Cement

Type IP(x) Portland-Pozzolan Cement Type IS(x) Portland- Slag Cement Type IT(Ax)(By) Ternary Blended Cement Type 1L(x) Portland Limestone Cement

Type II Portland Cement

High Early Strength Concrete Type III Portland Cement

> Type I, IP(x), IS(x), IT(Ax)(By), 1L(x) or II Cement may be used if strength and time requirements are met.



47

# TABLE 401-3: CONCRETE STRENGTH REQUIREMENTS Specified 28 Day Compressive Strengths, minimum, psi f'c

Grade of Concrete: Concrete	Non Air Entrained/Air Entrained
Grade 7.0	7,000
Grade 6.0	6,000
Grade 5.0	5,000
Grade 4.5	4,500
Grade 4.0	4,000
Grade 3.5	3,500
Grade 3.0	3,000
Grade 2.5	2,500



High Early Strength Concrete Special Provision 15-04005-R04, Sheet 4 Design the high early strength concrete mix to comply with strength and time requirements specified in the Contract Documents.

Unless otherwise specified, design high early strength concrete for pavement at a minimum of 1 of the Contractor's standard deviations above 2400 psi (cylinders) at 24 hours.

### **Special Provision 15-08016 states:**

- j. Opening to Traffic.
- When a minimum flexural strength of 380 psi or minimum compressive strength of 1800 psi is obtained from properly cured specimens.


Calculation on water to withhold for Calcium Chloride Addition 1% = 32(oz.) x hundred weight of Cement 128(oz.)


2% = 64(oz.) x hundred weight of Cement 128(oz.)


Example for 1% for **564Lbs** of Cement  $32 \times 5.64 = 1.41$  Gal/Per Yd.

128

\*Cement quantity is based on total cementitious for the particular mix

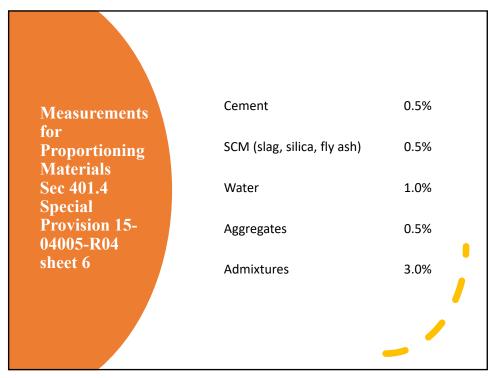

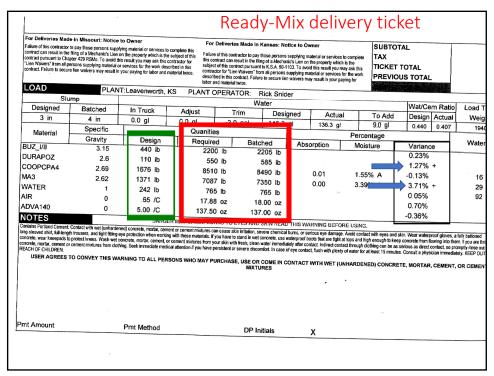

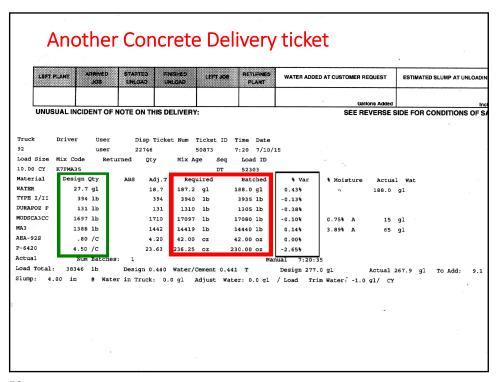

Aggregate stockpiles should be marked with an "Approved Materials' sign(specified in section 106.8) and limited to 250 ton or 500 ton for a mixed Handling of aggregate. Do not use segregated aggregate Materials Cementitious material should be stored 15-04005in a protected environment. R04 Sheet 7 Provide aggregate with a moisture content +/-0.5% from the average of that 401.4c day.



Aggregate bins

Coarse Aggregate bins





57

Granite Coarse Aggregate bin





# Underground belt fed aggregate bins





59

# Belts coming from underground aggregate flow bins







# Aggregate weigh bins inside the plant Kansas Department of Transportation

# Belts from weigh bins going into the mixing drum





63

# Mixing drum for a 'WET Batch' plant





# Plant mixing drum dispensing into the truck





65

# The Ready-Mix truck receiving the mixed concrete





# **Certified Concrete**

Special Provision 15-04005 R04 Sheet 9: 401.7

If KDOT inspection forces are not available on a temporary basis, the Engineer may authorize the use of concrete from approved concrete plants.

The engineer **will not** authorize the use of certified concrete for major structures such as bridges, RCB box bridges, RCB culverts, permanent main line and ramp pavement or other structurally, critical items.

Each load of certified concrete must be accompanied by a ticket filled out appropriately by certified plant personnel.



67

Mixing
Delivery and
Placement
Limitations
(SP 1504005
R04/401.8)

- ➤ Batch the concrete in a central mix plant(wet plant), in a truck(dry batch), or in a drum mixer.
- ➤ Do not exceed the rated capacity of the mixer and operate at suggested mixing speeds.
- In a central mix(wet batch) or drum mixer mix the batch between 1 to 5 minutes at mixing speeds. Mixing time begins when all the materials except water are in the drum and ends when the discharge chute opens.
- ➤ In a truck mixer(dry batch), mix the batch between 70 and 100 revolutions. Do not exceed 300 revolutions with the exception of an additional 60 may be allowed when using plasticizers.

# Delivery continued

- ➢If a truck mixer or agitator is used to deliver concrete from a central mix (wet batch) plant do not exceed <u>200</u> additional revolutions during delivery.
- ➤ When non agitating trucks are used to deliver concrete, place the concrete within 30 minutes of adding cement to water.
- Adding water to concrete after the initial mixing is prohibited, with this exception: If the concrete is delivered to the work site in a truck mixer, the Engineer will allow water (up to 2 gallons per cubic yard) be withheld from the mixture at the batch site, and if needed, added at the worksite to adjust the slump to specified requirements. Water should not be withheld from non-agitating trucks since there is no way to add it back. W/C ratio should be adjusted

69

# 15-04005-R04 (Table 401-5 sheet 10) Time/Temp Placement

**Less than 75 degrees Fahrenheit** ambient temp and no retarder equals 1.5 hours to place concrete

Equal or greater than 75 degrees up to 90 degrees Fahrenheit ambient temp and no retarder equals 1 hour to place concrete.

Between 75 and 90 degrees Fahrenheit ambient temp with a set retarder equals 1.5 hours to place.

In all cases, if the concrete temperature at time of placement is 90 degrees Fahrenheit or above the concrete must be place within 45 minutes of adding cement to water.



# Temp based concrete placement 15-04005-R04 Sheet 10

Air temp

Concrete

TABLE 401-5: AMBIENT AIR TEMPERATURE AND AGITATED CONCRETE PLACEMENT TIME					
T = Ambient Air Temperature at Time of Batching (°F)	Time limit agitated concrete must be placed within, after the addition of cement to water (hours)	Admixtures			
T < 75	1 ½	All Cases			
75 ≤ T < 90	1	None			
75 ≤ T < 90	1 ½	Set Retarder			
T <sub>c</sub> = Concrete Temperature at time of placement (°F)	Time limit agitated concrete must be placed within, after the addition of cement to water (hours)	Admixtures			
$90 \le T_c^*$	3/4	All Cases			
Other conditions contributing to quick stiffening of concrete	3/4	All Cases			

71

# Placing Concrete in Cold Weather Sheet 11(401-

8b) (SP 15-04005-R04)

Placing Concrete in Cold Weather. Unless authorized by the Engineer, discontinue mixing and concreting operations when the descending ambient air temperature reaches 40°F. Do not begin concreting operations until an ascending ambient air temperature reaches 35°F and is expected to exceed 40°F.



If the Engineer permits placing concrete during cold weather, aggregates may be heated by either steam or dry heat system before placing them in the mixer. Use an apparatus that heats the mass uniformly and is so arranged as to preclude the possible occurrence Fahrenheit e of overheated areas which might injure the materials. Do not heat aggregates directly by gas or oil flame or on sheet metal over fire. Aggregates that are heated in bins, by steam-coil or water-coil heating, or by other methods not detrimental to the aggregates may be used. The use of live steam on or through binned aggregates is prohibited. Unless otherwise authorized, maintain the temperature of the mixed concrete between 50 to 90°F at the time of placing. Do not, under any circumstances, continue concrete operations if the ambient air temperature is less than 20°F.

If the ambient air temperature is 35°F or less at the time the concrete is placed, the Engineer may require that the water and the aggregates be heated to between 70 and 150°F.

Do not place concrete on frozen subgrade or use frozen aggregates in the concrete.  $\label{eq:concrete}$ 

 $\label{longer} \mbox{Make adjustments for potential longer set time and slower strength gain for concrete with SCMs.}$ 

Adjust minimum time requirements as stated in SECTION 710 for concrete used in structures. For concrete paving, be aware of the effect that the use of SCMs (except silica fume) may have on the statistics and moving averages.



# From the SP 15-04005-R04 Sheet 11 401.8b Placement Limitations

(2) Placing Concrete in Cold Weather. Submit a cold weather concrete plan for approval to the Engineer prior to placing concrete in cold weather.

Unless authorized by the Engineer, discontinue mixing and concreting operations when the descending ambient air temperature reaches 40°F. Do not begin concreting operations until an ascending ambient air temperature reaches 35°F and is expected to exceed 40°F.

If the Engineer approves the cold weather concrete plan, aggregates may be heated by either steam or dry heat system before placing them in the mixer. Use an apparatus that heats the mass uniformly and is so arranged as to preclude the possible occurrence of overheated areas which might injure the materials. Do not heat aggregates directly by gas or oil flame or on sheet metal over fire. Aggregates that are heated in bins, by steam-coil or water-coil heating, or by other methods not detrimental to the aggregates may be used. The use of live steam on or through binned aggregates is prohibited. Unless otherwise authorized, maintain the temperature of the mixed concrete between 50 to 90°F at the time of placing.

Do not, under any circumstances, continue concrete operations if the ambient air temperature is less than 20°F.

If the ambient air temperature is 35°F or less at the time the concrete is placed, the Engineer may require that the water and the aggregates be heated to between 70 and 150°F.

Do not place concrete on frozen subgrade or use frozen aggregates in the concrete.




73

401 Appendix A (Sheet 12)

- One of the biggest attempts KDOT has implemented to improve the longevity of concrete is implement a permeability requirement.
- Water and chlorides permeate through the mortar and paste of concrete mixes. They do not readily pass through the larger aggregates. Permeability can be improved by decreasing the mortar and paste of the concrete mix and increasing the coarse aggregate portions.
- Lower W/C ratio, SCM's, Water Reducing admixtures, and optimizing the gradation can all improve permeability

#### Cross Section of densely graded concrete

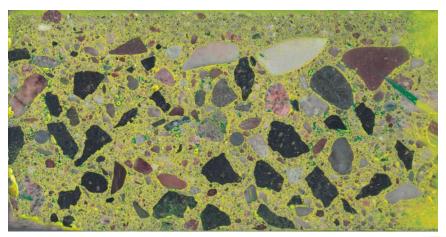



75

#### On-Grade Concrete Slump Requirements

Special Provision 15-04003 Sheet 3(f/Slump)

Design the concrete mixes for on grade concrete as specified in the Contract Documents.

Provide aggregates for on-grade concrete that meet requirements in Section 1116 for quality and gradation

Maximum design slump for slip form paving is 2.5 inches should not exceed 5 inches for all other on-grade paving. Designated slump of 3 inches or less has a tolerance of +/- (¾ inch). Designated slump greater than 3 inches has a tolerance of +/- (25% of designated slump)



Design using procedures in Section 401 and requirements specified in Tables 403-1 and 403-2

Permeability requirements do not apply for concrete patching material used when existing pavement is more then 10 years old.



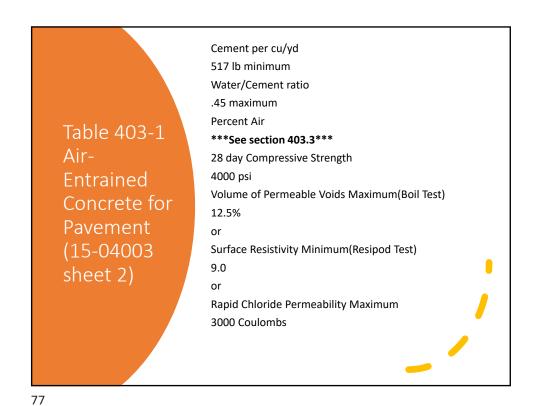


Table 403-2 Air-Entrained Concrete for Shoulders (15-04003 sheet 2)

> Cement per cu/yd. 480 lb. minimum Water/Cement ratio .45 maximum Percent Air See section 403.3\*\*\* 28 day Compressive Strength Volume of Permeable Voids Maximum(Boil Test) 12.5%

Surface Resistivity Minimum(Resipod Test)

9.0

Rapid Chloride Permeability Maximum 3000 Coulombs



403.3e-Design Air Content 15-04003 sheet 2

- Minimum air content for paving is 5% behind the paver with a maximum air void spacing(AVA) of 0.0100 inches behind the paver. (The <u>Target Air</u> for paving must meet this)
- Maximum air content 10% and steps should be taken when it hits 8% behind the paver.

79

## Paving mixes must be prequalified using the AVA(KT-71) before production.





# AVA Field sampling is behind the paver at the same time as an air content test(KT-18)







81

#### Mortar and paste sample behind the paver for AVA






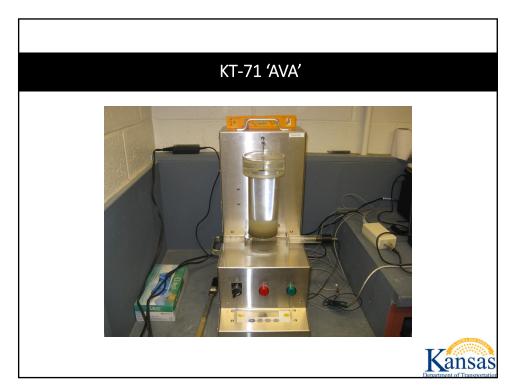

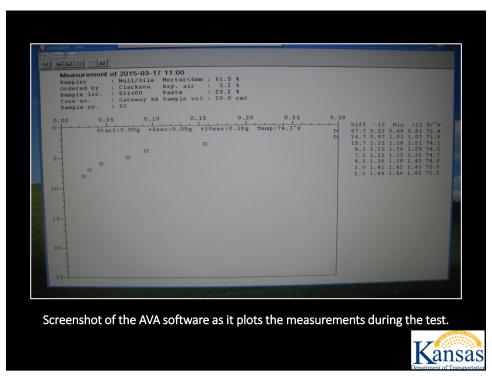






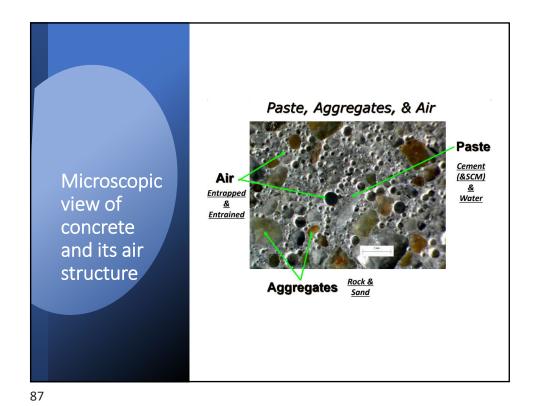

Section 501 QC/QA and Section 502 non-QC/QA You'll find whether it is a QC/QA job or not by looking in the contract line items. There will be a bid item for QC testing. QC/QA projects require an F&T spreadsheet QC/QA vs to be kept current tracking length and non-QC/QA strength of cores. The spreadsheet can be found on the KDOT Materials and Research paving home page or the local construction office. QC/QA projects will use Appendix B in the Construction Manual for testing frequencies. The contractor is required to turn in a QC Plan for the concrete paving. 501.2 outlines what is required in the plan.

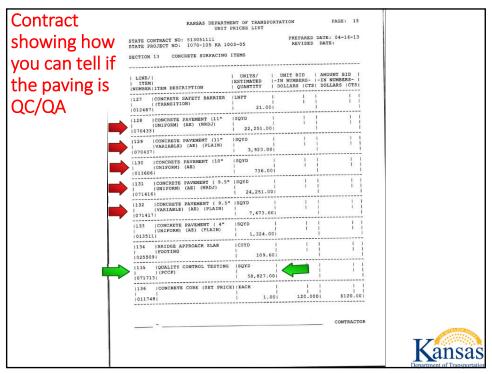

S2007 Section	1 501		Spec	07-05002-R01					
ts:			Project #			Name of QC T			
tes:			Contract#			Certification #			
Item Descri	ption					Contract Line	#'S		
				Compressive Stre	ength Correction				
Lot	Date	Contractor Compressive Strength (psi)	Contractor Capped Core Length (in)	Contractor Core Diameter (in)	Corrected Contractor Compressive Strength (psi)	KDOT Compressive Strength (psi)	KDOT Capped Core Length (in)	KDOT Core Diameter (in)	Corrected KDOT Compressive Strength (psi)
1A1									
A2									
1B1									
1B2									
1C1									
1C2									
1D1									
1D2									
1E1									
1E2									
2A1									
2A2									
2B1									
2B2									-
2C1									
2C2 2D1									
2D1 2D2									
2D2 2E1									
2E2									
3A1									
3A1 3A2									
3B1									
3B2									
3C1									
3C2									
3D1									
3D2									
3E1									
3E2									
4A1									
4A2							QC/0		
4B1							$(\mathcal{M})$	1/	
4B2							46/6	<i>1</i> /\	
4C1							/	•	
4C2								1.1	
4D1							chre	adche	tΩt
4D2							SPIC	JUSHIC	CL
4E1							•		
4E2									
5A1									
5A2									-
5B1									
5B2									
5C1									
5C2 5D1									
5D1									
5D2 5E1									
5E1 5E2									
6A1									
6A2									
UAZ						1			K

#### Division 1100 Special Provision 15-11004-R02

Section 1116-Aggregates for On-grade Concrete

Starting with the 2015 Specification Manual there was a push to have KDOT approved mixes be optimized with the exception of grouts, flowable fills and pavement patching more than 10 years old




91

Section 1116-Aggregates for On Grade Pavement 1116.2a lists the individual quality requirements for the on-grade aggregates

Simply put aggregates listed on the PQL for on-grade aggregate sources are approved for use and can be found here:

http://ksdot1.ksdot.org/burmatrres/pql/default.asp


Predominantly siliceous aggregate (granite, quartzite, river products) need to be on the wetting and drying list or will require SCM's (supplemental cementitious materials) to prevent ASR(alkali silica reaction) and require a mortar bar expansion test.

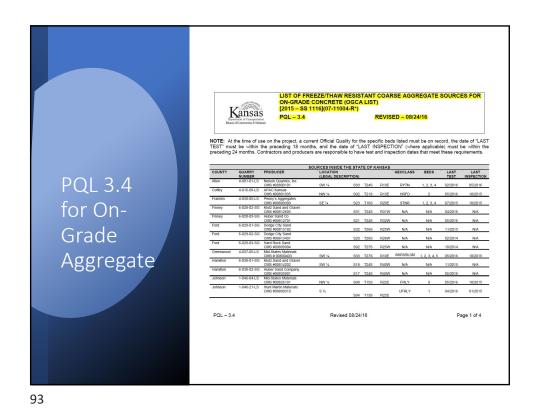


Alkali (Cement) + Silica (many aggregates)
+ Water

=
'Potential' ASR Gel which can
expand

=
causing
Cracking
Which is no Bueno

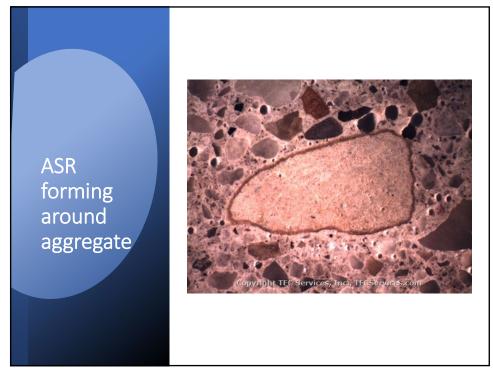

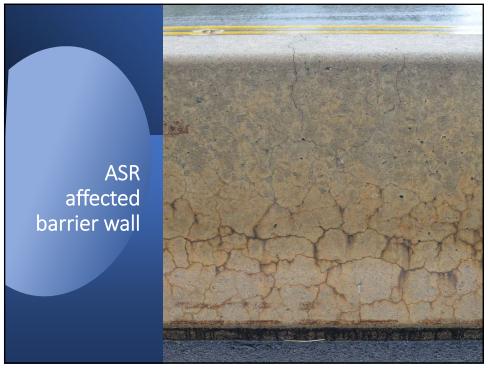



#### Special Provision 15-04005 R04, Sheet 5


j. Alkali Silica Reactivity. If the concrete mix design includes supplemental cementitious materials (SCMs), provide mortar expansion test results from ASTM C1567 as part of mix design approval unless meeting the minimum requirements shown in TABLE 401-4. Use the project's mix design concrete materials at their designated percentages. Provide a mix with a maximum expansion of 0.10% at 16 days after casting. Provide ASTM C1567 results on an annual basis.


	Are the Fine and	Proportion Required by Percent Weight o Total Cementitious Material					
Type of Coarse Aggregate Sweetener (refer to TABLE 1102-2 or TABLE 1116-1)	Intermediate (if used) Aggregate Sources on PQL 3.1?	Slag Cement	Class C Fly Ash	Class F Fly Ash	Silica Fume		
Crushed Sandstone, Crushed Limestone, Crushed Dolomite, Siliceous Aggregate on PQL 3.1, or Siliceous Aggregate not on PQL 3.1	No	ASTM C1567 Testing Required		25%	Any*		
Any combination of Crushed Limestone, Crushed Dolomite, Crushed Sandstone, and Siliceous	Yes	Any*	15%	Any*	Any*		


Aggregate on PQL 3.1

\*Subject to the maximum allowable percentages in TABLE 401-2.
ASTM C1567 Testing can be waived for ternary (3 cementitious materials) mix designs with approval of the KDOT Bureau of Research.



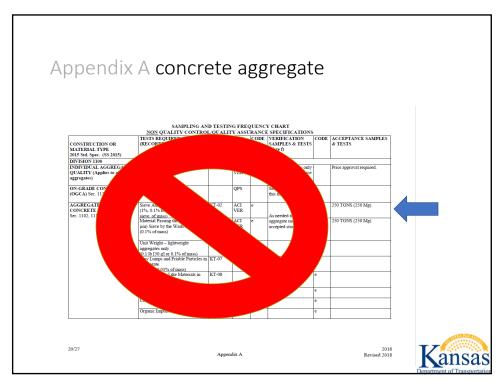

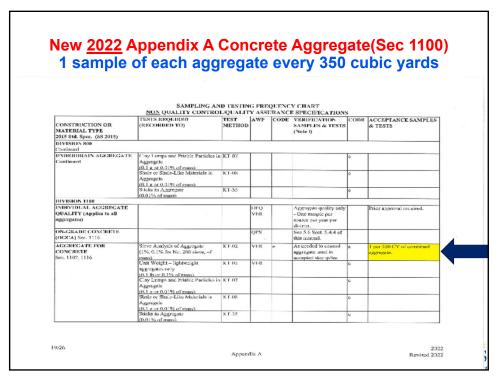

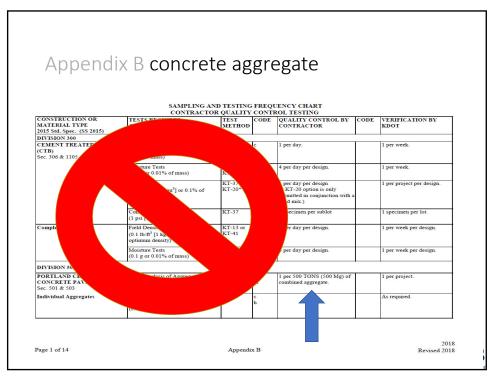



#### Individual aggregate gradation specs

	TABLE 1116-3: GRADING REQUIREMENTS FOR COARSE AGGREGATES											
Terms	Composition		Percent Retained - Square Mesh Sieves									
Туре	Composition	1 1/2"	1"	3/4"	1/2"	3/8"	No. 4	No. 8	No. 30			
CPA-1	Crushed Gravel or Crushed Stone	0	0-10	14-35		50-75		95-100				
CPA-3	Crushed Gravel or Crushed Stone			0	0-35	30-70	75-100	95-100				
CPA-4	Crushed Gravel or Crushed Stone		0	0-20	-	-		95-100				

TAF	TABLE 1116-4: GRADING REQUIREMENTS FOR FINE AGGREGATES FOR CONCRETE								
Tyme	Percent Retained-Square Mesh Sieves								
Type	3/8"	No. 4	No. 8	No. 16	No. 30	No. 50	No. 100	No. 200	
FA-A	0	0-10	0-27	15-55	40-77	70-93	90-100	98-100	



103

1116.2b Mixed Aggregates
Similar to Structural Concrete the On-Grade Concrete is required to be optimized.

	TABLE 1116-2	: ALL	OWA1	BLE GI	RADIN	G FOR	MIXEI	) AGGI	REGAT	ES FOR	CONC	RETE	
	Percent Retained - Square Mesh Sieves												
Type	Usage	1 ½"	1"	3/4"	1/2"	3/8"	No.	No. 8	No. 16	No. 30	No. 50	No. 100	No. 200
MA-3	Optimized All Concrete		0	2-12	Note <sup>1</sup>	Note <sup>1</sup>	Note	Note <sup>1</sup>	Note <sup>2</sup>	Note <sup>2</sup>	Note <sup>2</sup>	95-100	98-100
MA-4	Optimized All Concrete <sup>3</sup>	0	2-12	Note <sup>1</sup>	Note <sup>2</sup>	Note <sup>2</sup>	Note <sup>2</sup>	95-100	98-100				
MA-5	Optimized All Concrete		0	2-12	8 min	22-34		55-65		75 min		95-100	98-100
MA-7	Contractor Design KDOT Approved	Prop								in this tal			98-100

- <sup>1</sup>Retain a maximum of 22% and a minimum of 6% of the material on each individual sieve.

  <sup>2</sup>Retain a maximum of 15% and a minimum of 6% of the material on each individual sieve.

  <sup>3</sup>Maximum top size of Limestone is <sup>3</sup>4".
- - (d) Optimization Requirements for all Gradations. Actual Workability must be within  $\pm$  5 of Target Workability.

Where:  $W_A = Actual Workability$ 





#### Updated and current 1116.2b Mixed Aggregates

Similar to Structural Concrete the On-Grade Concrete is required to be optimized.

15-11004-R02 Sheet 3 of 6

		Percent Retained - Square Mesh Sieves											
Type	Usage	1 1/4"	1"	34"	36"	3∕8"	No. 4	No. 8	No. 16	No. 30	No. 50	No. 100	No. 200
MA-3	Optimized All Concrete		0	2-12	Note1	Notel	Note1	Note <sup>1</sup>	Note <sup>2</sup>	Note <sup>2</sup>	Note <sup>2</sup>	95-1004	98-1005
MA-4	Optimized All Concrete <sup>3</sup>	0	2-12	Note1	Note	Notel	Note1	Notel	Note <sup>2</sup>	Note <sup>2</sup>	Note <sup>2</sup>	95-1004	98-1005
MA-5	Optimized All Concrete		0	2-12	8 min	22-34		55-65		75 min		95-100	98-100
MA-7	Contractor Design KDOT Approved <sup>6</sup>	±2	±2	±6	±6	±6	±5	±5	±4	±4	±4	95-100	98-100

- | RAFO I Approved | 1 | Retain a maximum of 22% and a minimum of 6% of the material on each individual sieve. 

  Retain a maximum of 15% and a minimum of 6% of the material on each individual sieve. 

  Retain a maximum of 15% and he No. 100 sieve 

  Retain a maximum of 7% on the No. 100 sieve 

  Retain a maximum of 7% on the No. 200 sieve 

  Retain a maximum of 7% on the No. 200 sieve 

  Retain a maximum of 7% on the No. 200 sieve 

  Retain a maximum of 7% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 

  Retain a maximum of 20% on the No. 200 sieve 


  Retain a maximum of 20% on the No. 20% on the N


(b) Optimization Requirements for all Gradations, except MA-7.
 Actual Workability must be within ± 5 of Target Workability.




 $\begin{aligned} W_{\Lambda} &= Actual \ Workability \\ W_{T} &= Target \ Workability \\ CF &= Coarseness \ Factor \end{aligned}$ 



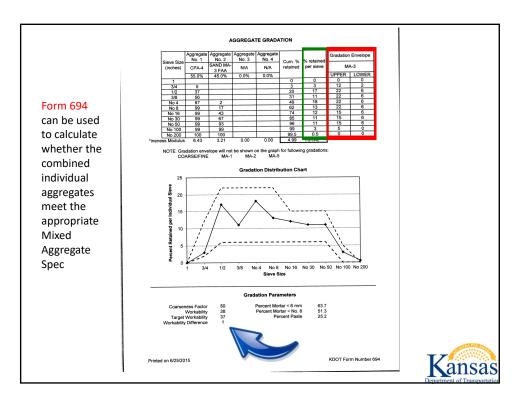

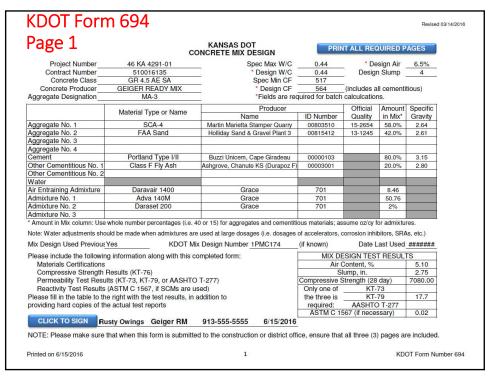

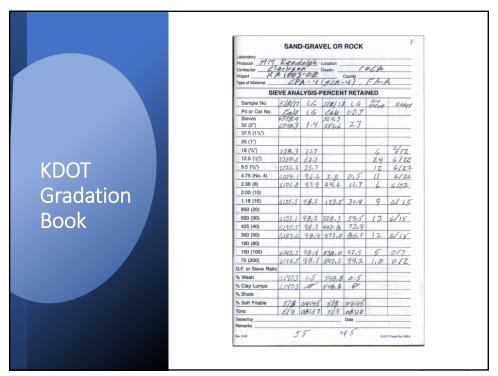

#### Handling of All Aggregates

- (a) Segregation. Before acceptance testing, remix all aggregate segregated by transit or stockpiling.(b) Stockpiling.
- Maintain separation between aggregates from different sources, with different gradings or with a significantly different specific gravity.
- Transport aggregate in a manner that promotes uniform grading.
- Do not use aggregates that have become mixed with earth or foreign material.
- Stockpile or bin all washed aggregate produced or handled by hydraulic methods for 12 hours (minimum) before batching. Rail shipment exceeding 12 hours is acceptable for binning provided the car bodies permit free drainage.
- Provide additional stockpiling or binning in cases of high or non-uniform moisture.

109

4.06.05 DUTIES AND RESPONSIBILITIES OF THE CONCRETE PLANT INSPECTOR The Inspector shall verify that the Contractor maintains proper control of materials and batching operations. The Inspector should be familiar with the requirements of the specifications for the type of testing needed; QC/QA or non-QC/QA. Duties will start at the time materials are being accumulated and continue until final records for the project are complete. Materials will be field tested at the concrete plant, which is a function of the Inspector.

The ready mix plant whether it be a permanent or mobile plant shall have a plant inspection completed and on file before any concrete batching is allowed. (Form 618)

Be familiar with specifications regarding the requirements of all equipment. See subsection 154-Concrete Pavement and Concrete Structure Equipment of the Standard Specifications. Prior to the start of batching operations, the Inspector must thoroughly check, verify calibrations, and verify that all equipment is of an approved design, and complies with the Standard Specifications.


4.06.05 DUTIES AND RESPONSIBILITIES OF THE CONCRETE PLANT INSPECTOR cont.

- The Inspector shall verify that the Contractor maintains proper control of materials and batching operations.
- Be familiar with specifications regarding the requirements of all equipment.
- The delivery of the concrete from the plant to the paver is a very important part of the overall operation of concrete paving.
- Accurate proportioning of aggregate and cement and/or fly ash.
- The Contractor will make free moisture tests at least twice daily (minimum of one in A.M. and one in P.M.) and more frequently if in the judgment of the Inspector there has been a change in moisture content. All tests will be recorded in a bound book and become property of KDOT upon completion of the project. The Inspector will observe the testing procedures. These tests are required so that batch weights may be adjusted, and to verify that the maximum water cement and/or fly ash ratio is not being exceeded.


111


Quick rundown of a typical daily plant inspection

- 1. Prior to the use, inspect the trucks.
  - A. manufacturers plate
  - B. Check fins for concrete buildup, excessive wear
  - C. Working rev counter
  - D. Sight glasses
  - E. Leaking water lines, valves
- 2. Arrive at the plant 30 or 40 minutes before batch time.
- 3. Upon arrival at the plant 1st check the stockpiles. Look for contamination, segregation, and approved stockpile signs. and start daily diary
- $\ensuremath{\mathsf{A}}.$  In cold weather make sure no frozen aggregate is being used
- 4. Check with the batch man to confirm what materials are being used so you can run a moisture test. Make sure you are current on tested material quantities.
- 5. Run the moisture tests using the oven or solution balance method. If the plant is using a sand probe it should be verified weekly with a compared moisture test.

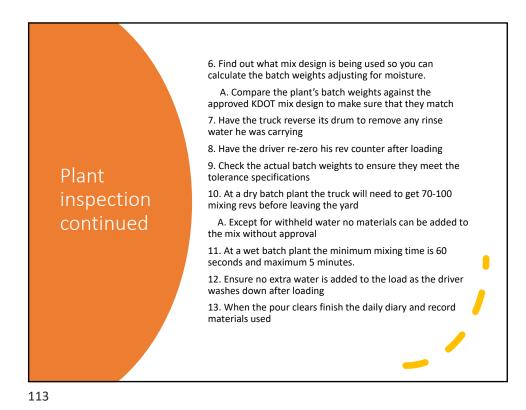



Plant Dairies
 Materials Used/Tested
 Cement Received/Used
 Moistures
 Concrete Delivery Ticket
 Aggregate Gradations
 http://www.ksdot.org/bureaus/burConsMain/specprov/specifications.asp

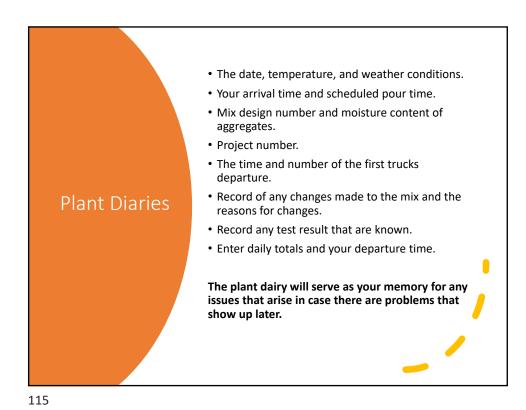


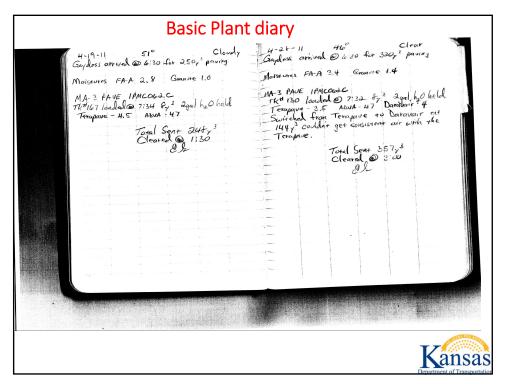


READY MIX TRUCK INSPECTION	Truck
TRUCK No: 29	
Make Rex	Unspection
SN: 70 XF 766/ Manufacturers Max MIN Recommoded Cop. 9 Cu. VII 1/2 Cu. VI.	
Manufacturers Max H MIN Recommoded Cop. 900. Yd 12 Cu. Vd.	part of the
Cy. Yds Mixed 7	
Theo Slump Z/2"	diary book
Actual Slump 23/4"	
Mtd Paint Slump 6/2	
end of land Slump 234	
Drum Condition Cken	- Buddhilletti tekk
Water tank: Clean	
Kloter Valve Tight Rev Counter Elector	
Agitate R.P.M. 2-4	
Mixing 5-14	
MFg/s Plate Ves	
Accepted Yes	_~ ~111:11111111111111111111111111111111
Remarks	
The transfer of the second of the	
A Augusta Line Comment	_~ :~ :~ :
Insp K	Kancac

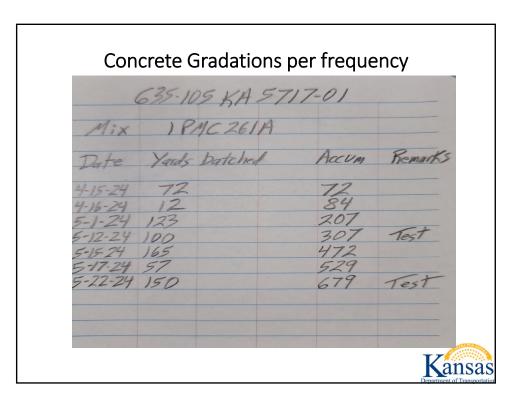


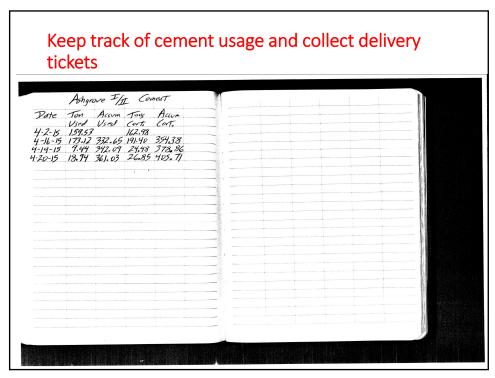


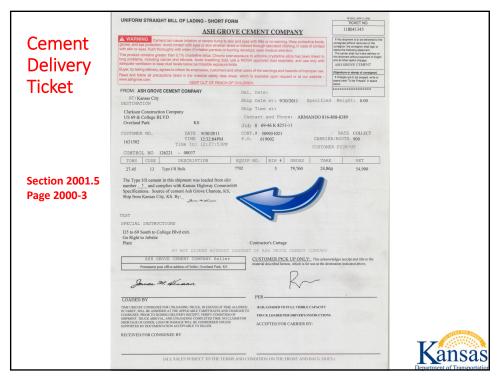


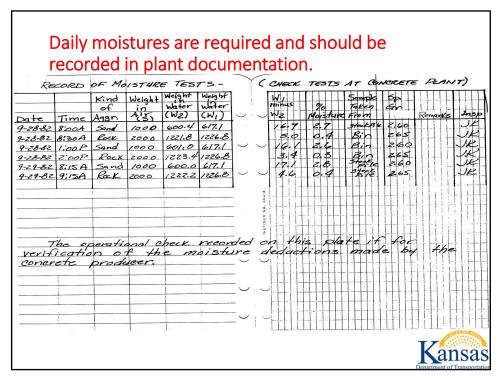



CONCRETE	DELIVERY TICKET 328350
Project 69-46 K 8251-08 County 10	Ready Mix Ticket No. 2168922  Date 10-1-15
Type Work PAVE	Class Conc. MA3 Pave m³(yd³) 8
Contractor Clarkson	Accumulated m³ (yd²) 8 Water Withheld L=3 (gal/yd³) 2
Supplier Found's Shawnee	Water Withheld L/m³ (gal/yd³)
Mix Design IPMC 126B	Truck No. 82/Z
Design kg/m³ (lb/ft³) 1480/8	Discharge Time
Admixtures:  2/m <sup>3</sup> (oz/yd <sup>3</sup> ) Airentraining Agent	Loading Time 8: 3Z
47 g/m² (oz/yd³) 6420 Other (Type)	Total Time
gm (02/34) t (-7/1-7	Additional
REQUIRED FOR CERTIFIED CONCRETE	Mixing Revs. Agitating Revs. Agitating Revs
	Final Final Final
Moist. Corr. FA 2,8 %; CA 6, CA 6, 6, 6, 6, 6, 6, 6, 6, 6, 6, 6, 6, 6,	Initial Initial Initial
and the second second second	Total Total Total
Corrected Mass per Volume: kg/m³ (lb/yd³)	Grand Total Revolutions
FA 1421; CA 1382; Water 188	Plant Inspector Fed Caydess
	Plant Inspector 4 (Mynes)
Certified Batcher No.	Job Inspector
	D.O.T. Form No
	D O T Form N

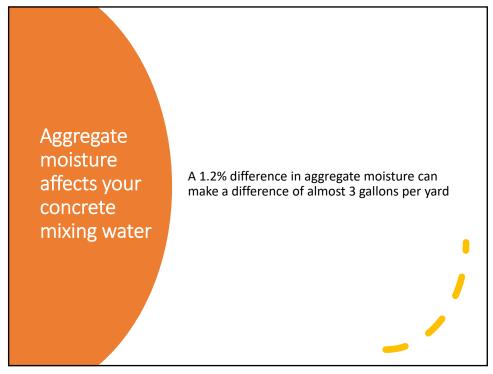

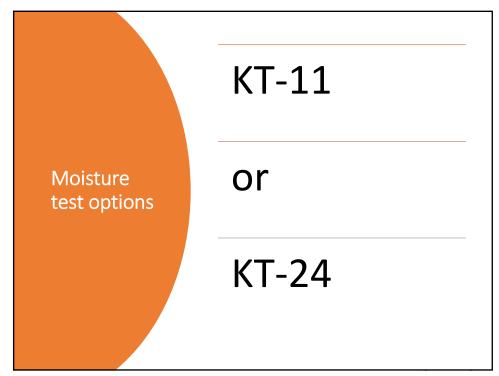


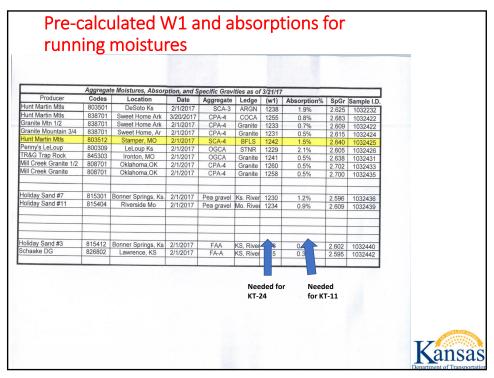


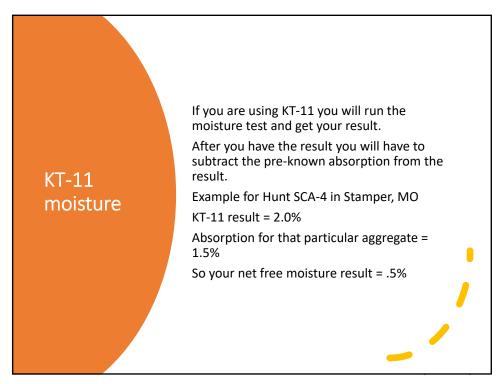

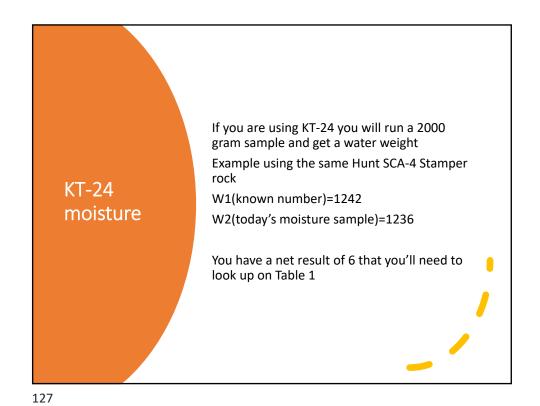

Kansas

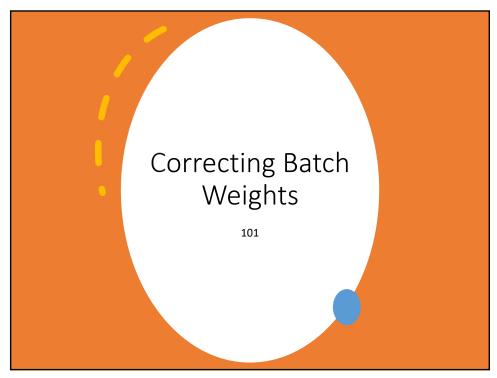

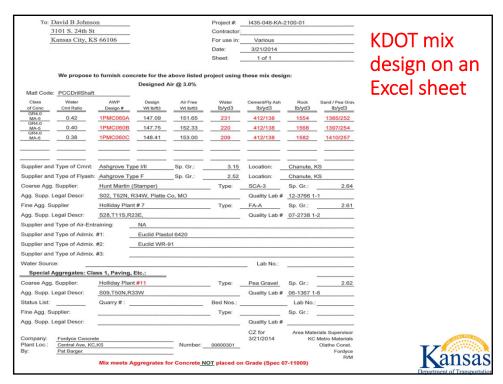

### Example #1 (1PMC060A) for writing

	Design Weight	Moisture Ran by plant or inspector	H20 Correction	Corrected Batch Weights
Rock	1554 lbs			
Rock				
Sand	1385 lbs			
Sand	252 lbs			
Cement	412 lbs			
Cement	138 lbs			
Water	231 lbs			
vvater	251 105			
	1		•	K

131

### EXAMPLE #1 (1PMC060A)

	Design Weight	Moisture Ran by plant or inspector	H₂O Correction	Corrected Batch Weights
Rock	1554 lbs	0.50%	+8 lbs	1562 lbs
Rock				
Sand	1385 lbs	3.00%	+42 lbs	1427 lbs
Sand	252 lbs	0.50%	+1 lbs	253 lbs
Cement	412 lbs			412 lbs
Cement	138 lbs			138 lbs
Water	231 lbs		-51 lbs	180 lbs
	3972 lbs			3972 lbs



### Example #2 (1PMC060B) for writing

	Design Weight	Moisture Ran by plant or inspector	H20 Correction	Corrected Batch Weights
Rock	1568 lbs			
Rock				
Sand	1397 lbs			
Sand	254 lbs			
Cement	412 lbs			
Cement	138 lbs			
Water	220 lbs			
	3989 lbs			



133

## EXAMPLE #2 (1PMC060B)

	Design Weight	Moisture Ran by plant or inspector	H₂ <b>O</b> Correction	Corrected Batch Weights
Rock	1568 lbs	-1.0%	-16 lbs	1552 lbs
Rock				
Sand	1397 lbs	1.50%	+21 lbs	1418 lbs
Sand	254 lbs	0.00%	0	254 lbs
Cement	412 lbs			412 lbs
Cement	138 lbs			138 lbs
Water	220 lbs		-5 lbs	215 lbs
	3989 lbs			3989 lbs



